





Professional Audio

DILOS DILOS SUB

USER MANUAL

CONTENTS

USING THE UNIT SAFELY	3
PRODUCTS AND ACCESSORIES	7
PARTS	8
COMBINATION MODE	9
OPERATION MODE AND CONNECTION	13
PANEL CONTROLS	15
DILOS/DILOS SUB CONTROLS AND DUNCTIONS	16
TECHNICAL SPECIFICIATION	17
SUPPORT AND TROUBLE SHOOTING	18

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS				
About WARNING and CAUTION Notices About the Sy		About the Symbols		
WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.		A	This symbol alerts the user to important instructions or warnings.
CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly.		0	This symbol alerts the user to items that must never be carried out (are forbidden).

ALWAYS OBSERVE THE FOLLOWING

WARNING	WARNING
Before using this unit, make sure to read the instructions below, and the Owner's Manual.	Use only the attached power-supply cord. Also, the supplied power cord must not be used with any other device.
Do not open (or modify in any way) the unit or its AC adaptor. Do not attempt to repair the unit, or replace parts within it(except when this manual provides specific instructions directing you to do so). Refer	Do not excessively twist or bend the power cord, nor place heavy objects on it. Doing so can damage the cord, producing severed elements and short circuits. Damaged cords are fire and shock hazards.
all servicing to your retailer or the nearest authorized Service Center. Never use or store the unit in places that are: Subject to temperature extremes(e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are Damp and humid(e.g., baths, washrooms, on wet floors); or are	This unit, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level, or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should immediately stop using the unit, and consult an audiologist.
Exposed to rain; or areDusty; or areSubject to high levels of vibration.	Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit.
Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces.	Immediately turn the power off, remove the AC adaptor from the outlet, and request servicing by your retailer or the nearest authorized Service Center when:

The AC adaptor, the power-supply cord, or the plug has been damaged; or

If smoke or unusual odor occurs

Objects have fallen into, or liquid has been spilled onto the unit; or

The unit has been exposed to rain (or otherwise has become wet); or

The unit does not appear to operate normally or exhibits a marked change in performance.

USING THE UNIT SAFELY

WARNING			CAUTION	
0	Protect the unit from strong impact. (Do not drop it!)		0	Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children.
	Do not force the unit's power-supply cord to share an outlet with an unreasonable number of other		0	Never climb on top of, nor place heavy objects on the unit.
0	devices. Be especially careful when using extension cords-the total power used by all devices you have connected to the extension cord's outlet must never exceed the power rating		0	Never handle the AC adaptor or its plugs with wet hands when plugging into, or unplugging from, an outlet or this unit.
	(watts/amperes) for the extension cord. Excessive loads can cause the insulation on the cord to heat up and eventually melt through.		A	Before moving the unit, disconnect the AC adaptor and all cords coming from external devices.
A	Before using the unit in a foreign country, consult with your retailer or the nearest authorized Service Center.		A	Before cleaning the unit, turn off the power and unplug the AC adaptor from the outlet.
0	Batteries must never be recharged, heated, taken apart, or thrown into fire or water.		0	Whenever you suspect the possibility of lightning in your area, disconnect the AC adaptor from the outlet.
A	Only switching off the unit and unplugging from an outlet, the unit is powered off completely.			If used improperly, batteries may explode or leak and cause damage or injury. In the interest of safety, please read and observe the following precautions. Carefully follow the installation instructions
A	The unit and the AC adaptor should be located so their location or position does not interfere with their proper ventilation.			for batteries, and make sure you observe the correct polarity. Avoid using new batteries together with used ones. If a battery has leaked, use a soft piece of
A	Always grasp only the plug on the AC adaptor cord when plugging into, or unplugging from, an outlet or this unit.		A	cloth or paper towel to wipe all remnants of the discharge from the battery compartment. Then install new batteries. To avoid inflammation of the skin, make sure that none of the battery discharge gets onto your hands or skin. Exercise the utmost caution so that none of the discharge gets near your eyes. Immediately rinse the affected area with running water if any of the discharge has entered the eyes. Never keep batteries together with metallic objects such as ballpoint pens, necklaces, hairpins, etc. Dispose of the waste battery according to national or local regulations regarding hazardous waste.

	At regular intervals, you should unplug the AC adaptor and clean it by using a dry cloth to wipe all dust and other accumulations away from its prongs. Also, disconnect the power plug from the	A	Should you remove screws, keep them in a safe place out of children's reach, so there is no chance of them being swallowed accidentally.
A	power outlet whenever the unit is to remain unused for an extended period of time. Any accumulation of dust between the power plug and the power outlet can result in poor insulation and lead to fire.	0	Shock hazardous voltages and currents are present inside the enclosure. Do not remove and replace the speaker grill and speaker by any means.

USING THE UNIT SAFELY

IMPORTANT NOTES

Power Supply: Use of Batteries

- Do not connect this unit to same electrical outlet that is being used by an electrical appliance that is controlled by an inverter (such as a refrigerator, washing machine, microwave oven, or air conditioner), or that contains a motor. Depending on the way in which the electrical appliance is used, power supply noise may cause this unit to malfunction or may produce audible noise. If it is not practical to use a separate electrical outlet, connect a power supply noise filter between this unit and the electrical outlet.
- The AC adaptor will begin to generate heat after long hours of consecutive use. This is normal, and is not a cause for concern.
- When installing or replacing batteries, always turn off the power on this unit and disconnect any other devices you may have connected. This way, you can prevent malfunction and /or damage to speakers or other devices.
- Use only suitable rechargeable batteries of the same size and type. Make sure the polarity is correct. Or it may cause this unit to malfunction.
- Please charge the battery as soon as you can when in low energy. The battery's storage capacity goes down if not using it for a long time.

Note: Please charge the battery once a month regularly if not using it for long period.

Placement

- Using the unit near power amplifier (or other equipment containing large power transformers) may induce hum.
 To alleviate the problem, change the orientation of this unit; or move it farther away from the source of interference.
- This device may interfere with radio and television reception. Do not use this device in the vicinity of such receivers.
- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this unit. Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Also, do not allow lighting devices that normally are used while their light source is very close to the unit (such as a piano light), or powerful spotlights to shine upon the same area of the unit for extended periods of time. Excessive heat can deform or discolor the unit.

IMPORTANT NOTES

- When moved from one location to another where the temperature and /or humidity is very different, water droplets (condensation) may form inside the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.
- Do not allow rubber, vinyl, or similar materials to remain on the unit for long periods of time. Such objects can discolor or otherwise harmfully affect the finish.
- Do not paste stickers, decals, or the like to this instrument. Peeling such matter off the instrument may damage the exterior finish.

Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation

Additional Precautions

- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- When connecting/disconnecting all cables, grasp the connector itself-never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- To avoid disturbing your neighbors, try to keep the unit's volume at reasonable levels (especially when it is late at night or near specific places like schools or hospitals).
- When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.
- Some connection cables contain resistors. Do not use cables that incorporate resistors for connecting to this unit. The use of such cables can cause the sound level to be extremely low, or impossible to hear. For information on cable specifications, contact the manufacturer of the cable.

PRODUCTS AND ACCESSORIES


PRODUCTS AND ACCESSORIES



DILOS * 1 Instruction warranty card



PRODUCTS AND ACCESSORIES

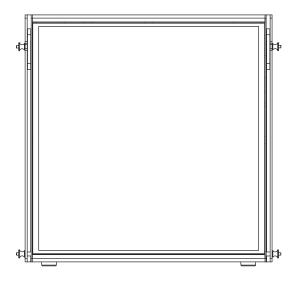

DILOS SUB * 1 Instruction warranty card





3M power cord * 1

PARTS







2M signal cable



control signal adaptor





0.6M power cord




2M power cord

Flybar

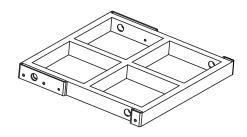


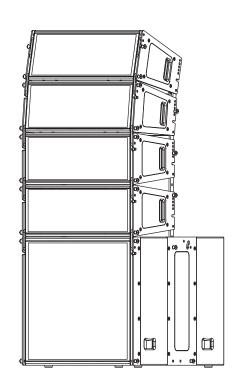


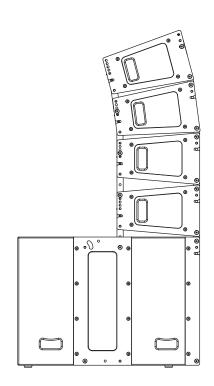


Combination mode 1


Recommendation list

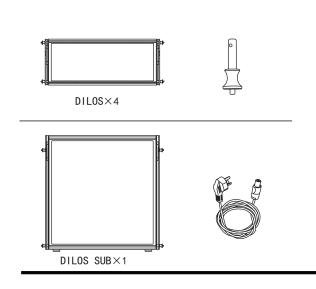


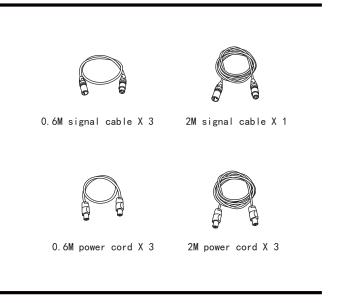

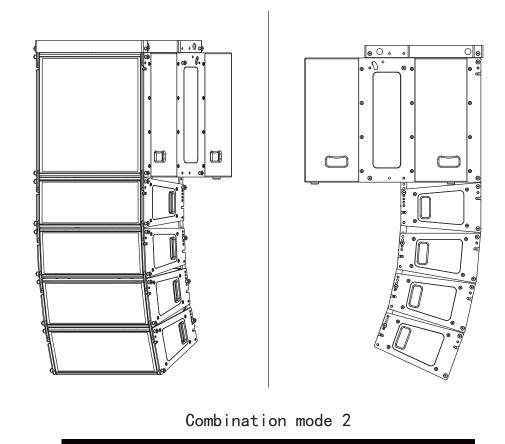



Recommendations list

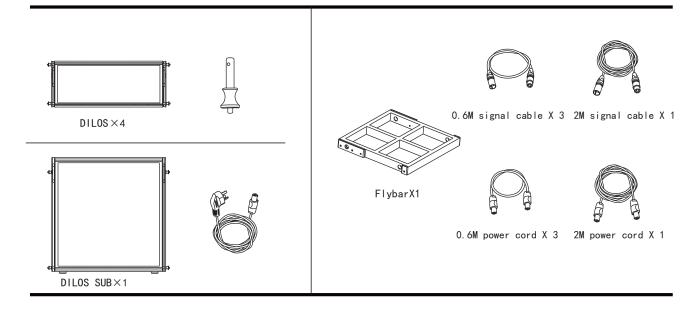

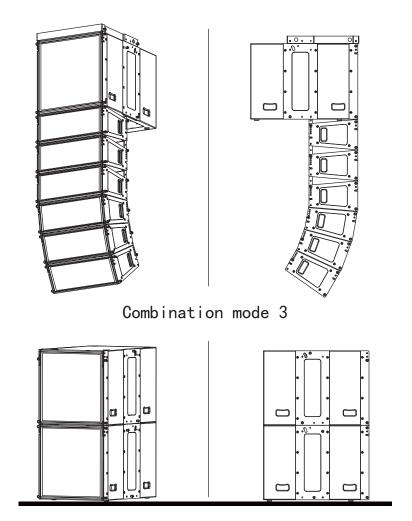


Recommendations list

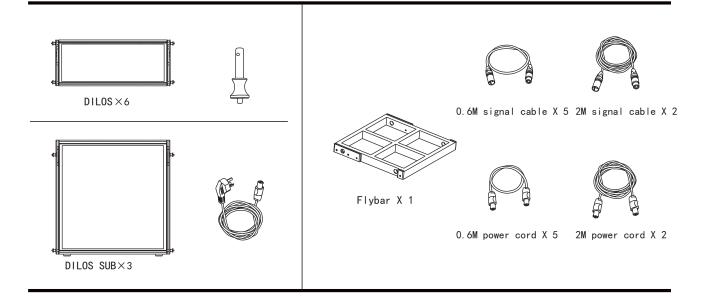

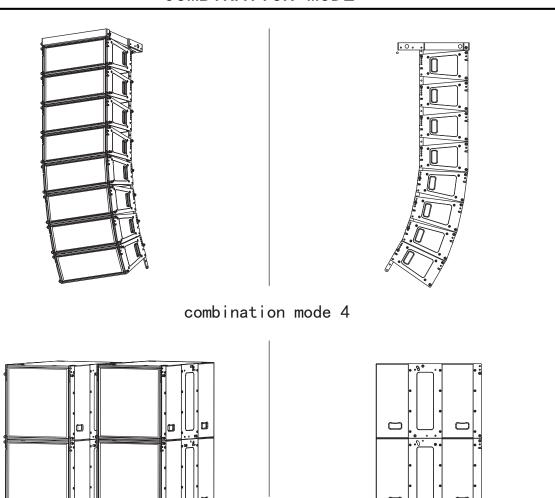


Recommendations list

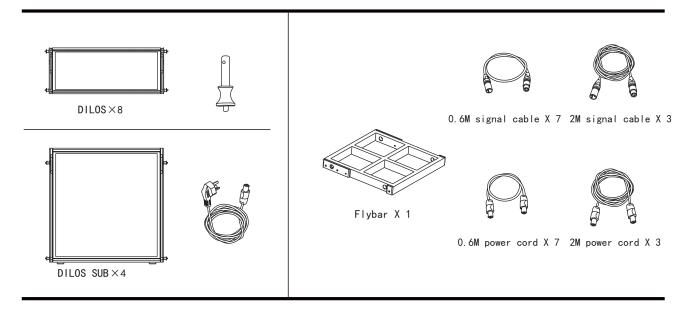


OPERATION MODE AND CONNECTION

Multi-angle between every two loudspeaker boxes


Different holes setup can make the angle of the satellites to 0° 2.5° 5° 7.5° 10°

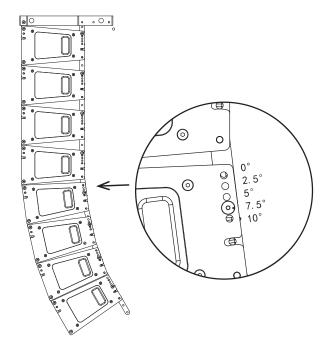


connection

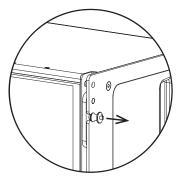


1, pull out the lockpin

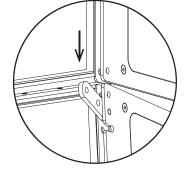

3, put it into the next loudspeaker box

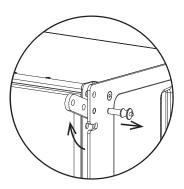


2. Flip the connector

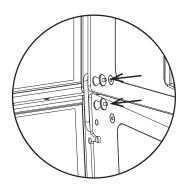


4, insert the lockpin

OPERATION MODE AND CONNECTION

Using RS485 control signal adaptor and XLR audio interface to connect, by using software to control every single loudspeaker box with regard to gain, EQ, noise gate, compression, polarity, delay, etc. The maximum loudspeaker boxes can reach to 32pcs which can be controlled simultaneously.

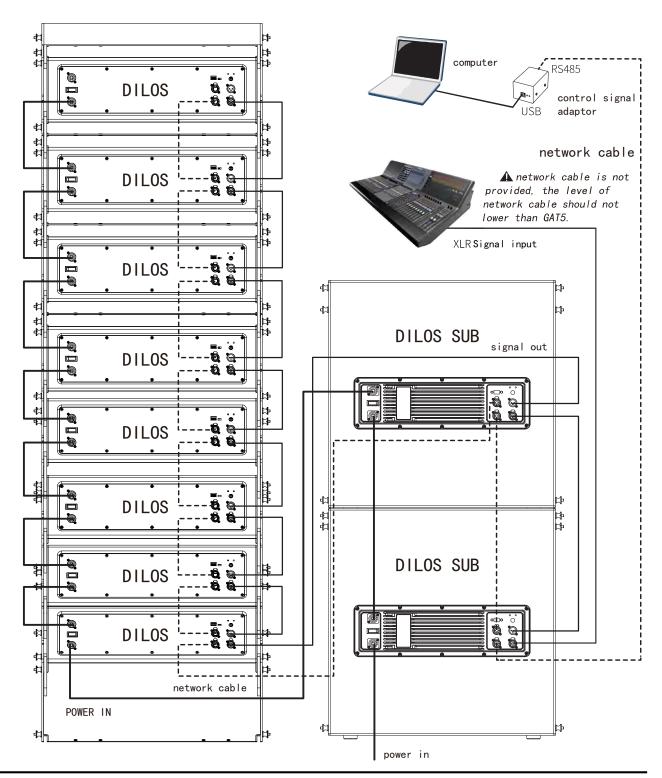

PANEL CONTROLS

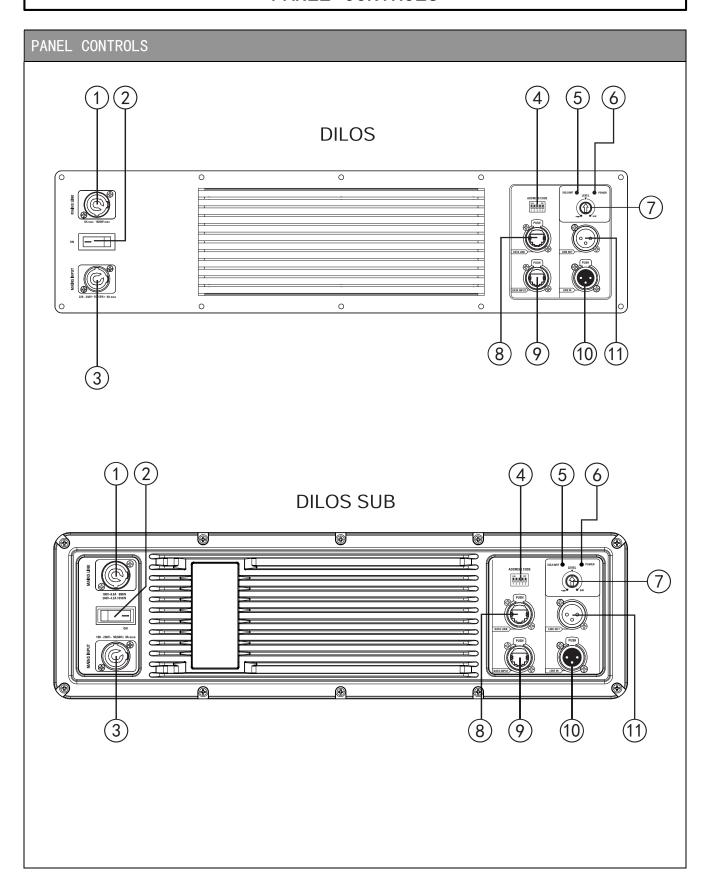

DILOS/DILOS SUB CONTROLS AND DUNCTIONS

PANEL FUNCTIONS INSTRUCTIONS

1, MAINS LINK

Link to power in of the next loudspeaker box, the voltage is same between power out and power in. Insert the power cord, rotate right to ON turn the power on, reverse to OFF turn the power off.

2, power switch

Switch to ON to power on this loudspeaker

3. MAINS INPUT

Power on the mains electricity: the applicable voltage of the machine is 220-240V $^{\sim}$ 50 / 60Hz. Please connect it with the power cord of the machine, insert the power cord, turn right to on, turn left to off.

4、ADDRESS CODE

This coding switch can set different address codes for each array box, so that the software can distinguish each speaker for debugging. The specific coding rules are based on "8421" coding, there are 32 different combinations, please see the software interface settings for details.

5、SIG/LIMIT

When the machine is powered on and there is no power on signal, the light will not be on. When there is an input signal, the light will be green. When the machine reaches full power, the light will be red.

6、POWER

When the machine is powered on, the indicator light is blue, indicating that the power supply of the machine is normal.

7、LEVEL

Only for controlling the gain of the product, turn it to the right and gradually increase the volume $\,$

8. DATA LINK

This port is the RS485 control output port, which can be connected with the network cable input port of the next D8F/SUB through the network cable (the network cable level needs no lower than GAT5). Composed of daisy-chaining structure, up to 32 speakers can be debugged simultaneously.

9. DATA INPUT

This port is the RS485 control input port, which can be connected with the control signal distributor through the network cable (the network cable level needs no lower than GAT5), use RS485 control signal adaptor and XLR audio interface to connect, by using software to control every single loudspeaker box with regard to gain, EQ, noise gate, compression, polarity, delay, etc. Please refer to the software settings for details.

10, LINE IN

It can be connected to LINE signal source (such as mixer, effector, etc.) through XLR cable.

11, LINK OUT

The output signal can be connected to the signal input interface of the next D8F/SUB through XLR line, and the output signal is the same as the input signal.

.

TECHNICAL SPECIFICIATION

MODEL	DILOS	DILOS SUB	
Frequency Response	60~20kHz	35~120Hz	
Impedance	4Ω	8Ω	
Crossover point	300Hz; 2000Hz	/	
Max output spl(1M)	130dB	134dB	
Power output(RMS)	1400W	1000W	
	1*XLR	1*XLR	
Inputs	1*RS485	1*RS485	
Outputs	1* XLR	1* XLR	
Outputs	1*RS485	1*RS485	
Power input plug	POWERCON IN	POWERCON IN	
Power output plug	POWERCON OUT	POWERCON OUT	
Power inputs	220-240 VAC 50/60Hz	220-240 VAC 50/60Hz	
Fuse	T4AL/250V	T6. 3AL/250V	
Limiter	DSP digital limiting	DSP digital limiting	
Driver	woofer:1*8"; midrange:1*8; drive 2*1"	subwoofer:1*18"	
Coverage Pattern(H*V)	90° *15°	/	
Cabinet Material	Birch PLY	Birch PLY	
Grill	1.2mm steel	1.5mm steel	
Color	black	black	
Dimension(W*H*D)	250*620*400mm	630*620*880mm	
Net weight	30kg	78. 5kg	
MEAS(H*W*D)	54. 5*36. 5*73. 5cm/1PC	104. 5*75. 5*79cm/1PC	
G.W.	33kg	85kg	

SUPPORT AND TROUBLE SHOOTING

	TROUBLE SHOOTING				
	A. Please check whether the power cord is tightly plugged and turn right to the ON position.				
No sound from the loudspeaker	B. Please check whether all cables are right connected and the connection is firm.				
	C. Please check whether the settings of DSP and LEVEL are in the normal working position.				
	D. Make sure the sound source device is working normally and can play the required signal.				
	E. Check whether the LEVEL setting is too low or not, adjust the output LEVEL setting of the sound source device, or increase the output LEVEL with the LEVEL controller.				
	A. Check whether the sound source input is normal.				
	B. Check whether the cable is bent, short circuit or broken.				
Loudspeaker has hum or buzz	C. Check whether the signal connecting wire is in good connection.				
	If the signal indicator is in red for long time, it means that the output volume is too D. large. Please adjust the output LEVEL setting of the source device, or use the LEVEL controller to adjust the output LEVEL.				
Each speaker sounds differently (If using multiple speakers at the same time)	Set DSP switch and LEVEL switch of each speaker in the same position.				
Sound breaks up suddenly	Please wait until the amplifier cools down. If the device does not reset automatically, please turn off the power and then turn it back on.				



www.i-hos.eu

sales@i-hos.eu