

## FOS 6CH Console



# DMX-6

## User Manual

Thank you for purchasing of the DMX-6. The This device is used to control spotlights, dimmers, lighting effects equipment or other DMX controlled devices. To optimize the performance of this product, please read the user manual carefully before use.

### What is included

The following items are included in the box:

- 1pc DMX-6
- 1pc 9V DC power adapter
- 1pc User Manual

### Safety Instruction



**WARNING!!! To reduce the risk of fire, electric shock, or injury to persons, follow these important safety instructions:**


- This product is intended for indoor use only!
- Always turn off, unplug power and allow fixture to cool before servicing.
- Ensure that fixture is properly grounded.
- Please keep this User Guide for future consultation.
- To prevent risk of fire or shock, do not expose fixture to rain or moisture.
- Make sure power cord is never crimped or damaged.
- Disconnect the unit's main power when left unused for long periods of time.

### IMPORTANT INFORMATION!

In order to optimize the recovery and recycling of the materials that old appliances contain and reduce the impact on human health and the environment, ensure that this product is recycled at the end of its life.



## Product Overview

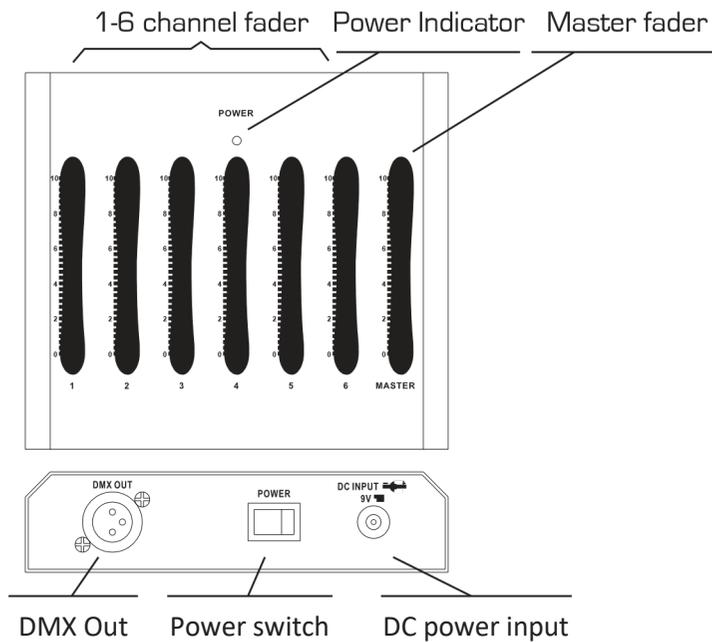

## Power supply

You can use either a 9-V battery or the 9-V connector for external power supply. Before connecting check for correct polarity.

## Features


- 6 channel faders
- Master fader
- Compact design
- Simple operation
- Power adapter included

## Changing the battery

To insert or change the battery, switch off the device first. Loosen the screws located at the edges of the base plate. Do not loosen the three screws in the middle of the base plate. Carefully remove the base plate. Take care not to damage the cable. Change the battery. Remount the base plate without squeezing the cables. Insert and tighten the screws.

## Connection

Connect the DMX input of the device to the DMX output of a DMX controller or another DMX device. Connect the output of the first DMX device to the input of the second one, and so on to form a daisy chain. Always ensure that the output of the last DMX device in the daisy chain is terminated with a resistor ( $110 \Omega$ ,  $\frac{1}{4} W$ ).

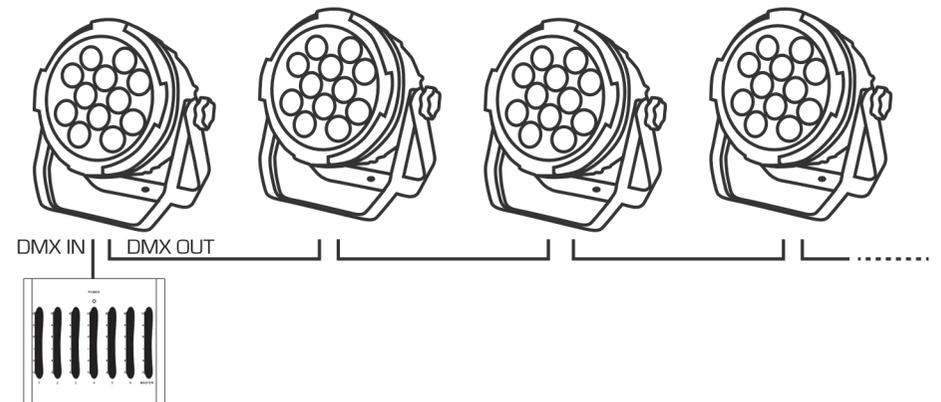

## **SPECIFICATIONS**

Output: 3pin XLR female

Operating voltage: 9V DC power supply unit or 9V radio battery 6LR61 or 6LF22

Dimension: 173 x 154 x 60 mm

Weight: 0.8 kg