




## ATLAS Tube

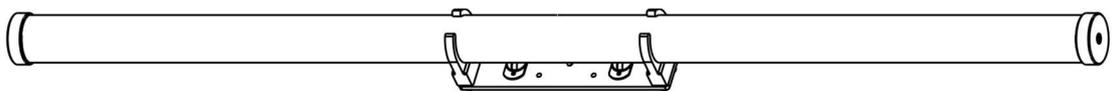

**Waterproof & battery bar, with wireless control**

---

# Instruction Manual of

## Atlas Tube

---

This product manual contains important information about the safe installation and use of this product. Please read and follow these instruction carefully and keep this manual in a safe place for future reference.



# 1 Introduction

## 1.1 Security Warning

---

- When unpacking and before disposing of the carton, check if there is any transportation damage before using the product. Should there be any damage caused by transportation, consult your dealer and do not use the apparatus.
- Product should install in a cool place.
- The product is only intended for installation, operation and maintenance by qualified personnel. And read the user manual and labels on the lighting carefully before use.
- Please do not attempt to dismantle and/or modify the product inner structure.
- Electrical connection must only be carried out by qualified personnel.
- Do not connect this device to any other types of dimmer apparatus.
- There are protection structure and circuit for the battery inside the unit, any inappropriate dismount of the light or battery might break the protection function and lead to batter getting hot, smoking, deforming or fire.
- Never short-circuit the unit.

- Heating and burning will melt the battery separator, causing loss of protection function or burning of electrolyte and overheat will cause heating, smoking, deformation or burning of batteries.
- Never use the unit in an environment over 40°C, don't charge the unit close to fire source or under direct sun. Don't throw the unit to water, otherwise, the protection function inside the batter might lose or abnormal chemical reaction might arise, causing battery to be hot, smoking, deformation or fire.
- Use only the supplied power supply, for charging the fixture.
- Place the unit where kids can't reach.
- If the charging time over the standard charging time for long, it is advised to stop charging. It will extend the charging time if charging while using, it is advised to turn off the light when charging.
- Not to use the unit in an environment where there is static electricity, the battery protection circuit might easily malfunction.
- Use the supplied power adapter only, never charging over 24 hours.
- When not using the unit for long term, please save the unit properly in a dry place, battery should be half charged.
- Please recycle the used unit, never throw to fire or water.

If you have any questions, don't hesitate to consult our dealer or manufacturer.

**Important: Before any installation, maintenance and cleaning, please ensure that the power cut off!**

## 1.2 Main Technical Parameters

---

### Lithium battery

- Charging Voltage: DC12.6V/2A
- Battery Specification: 21700 4.2V/4.5Ah\*12 cells (12.6V/18Ah)
- Charge Time: 8~10 hours
- Circulation Life: Not less than 300 times / Run Time Of Battery: Max. 20h

### LED

- LED Type: 288pcs ×0.3Watts RGBW 4in1 full-color LED
- Control Pixel: 32 Pixels
- Rated Power: 50W
- Colors: 16.7 million colors (0~100% saturation dimming) / Life: 50000 hours

### Control

- Control Protocol: International standard DMX-512 signal

- Channel Protocol: 7 kinds of control channel mode. 2CH; 4CH; 6CH; 11CH; 32CH -8 Pixels; 64CH -16 Pixels; 128CH -32 Pixels;
- Control Mode: DMX-512, auto, master-slave, music, infrared remote control, wireless DMX-512 and Mobile APP WIFI control.
- Wireless Protocol: W-DMX

### **Wireless DMX Specs**

- 2.4G Communication Distance: 200M (clearing, it changes vary with different environments)
- WIFI Communication Distance: 30M (clearing, it changes vary with different environments)
- Band: 2.4G ISM, 126 channel frequencies
- Maximum Transmit Power: 20dBm
- Receiver Sensitivity: -94dBm

### **Optical System**

- Dimmer: From 0 -100 linear dimming.
- Flashing Rate: 1 -20Hz / Beam Angle: 180°

### **Physical**

- Dimensions: Ø52 x 1190 mm
- Weight: 1.72kg

### **Security**

- Cooling System: Convection
- Waterproof Rate: IP65
- Temperature Protection: 60°C
- Operating Environment: Indoor / Outdoor

## **1.3 Product Features**

---

**Using the latest LED control technology, this product is designed for stage and event sites and can be used to create stunning lighting effects. Its main features include:**

- 1) Product built-in lithium battery and the DMX signal wireless module.
- 2) Product built-in WIFI receiving module, which can be controlled by mobile APP.
- 3) Wireless DMX with transceiver function.
- 4) With music control function.

- 5) Custom color temperature settings.
- 6) Built-in commonly used film and television shooting effects.
- 7) With charging protection and current overload protection.
- 8) Intuitive and convenient battery display function.
- 9) The static power consumption of the control panel is 0.3W, and its efficiency will reach up to 97% during the process of high-power output, which realizes the function of eco-friendly operation.
- 10) Overheating automatic protection function.
- 11) IR infrared remote-control panel.
- 12) Touch button and LCD display.
- 13) Password protected keyboard.
- 14) 7 kinds of DMX working modes.
- 15) Built-in 68 kinds of Auto effect.
- 16) Master-slave control, multi-units for synchronous wireless control.
- 17) Software system updates & upgrades are available through DMX 512 or wireless DMX.

## 1.4 Product Packing Information




Following accessories are packed together with the product, please check them carefully upon unpacking.

Spare parts Name	QTY	Unit	Remark
Magic Tube light	1	piece	
Charger	1	piece	
DMX signal cable IN&OUT	2	pieces	
Infrared remote controller	1	piece	
Instruction Manual	1	piece	

# 2 Product Installation

## 2.1 DMX Connection Method

When set the DMX512 address code be CH4 MODE, as below:

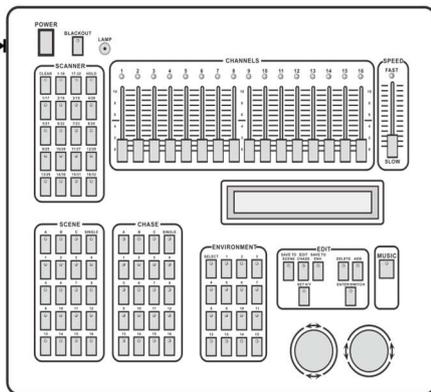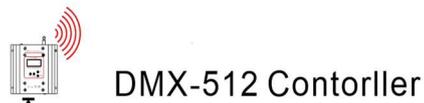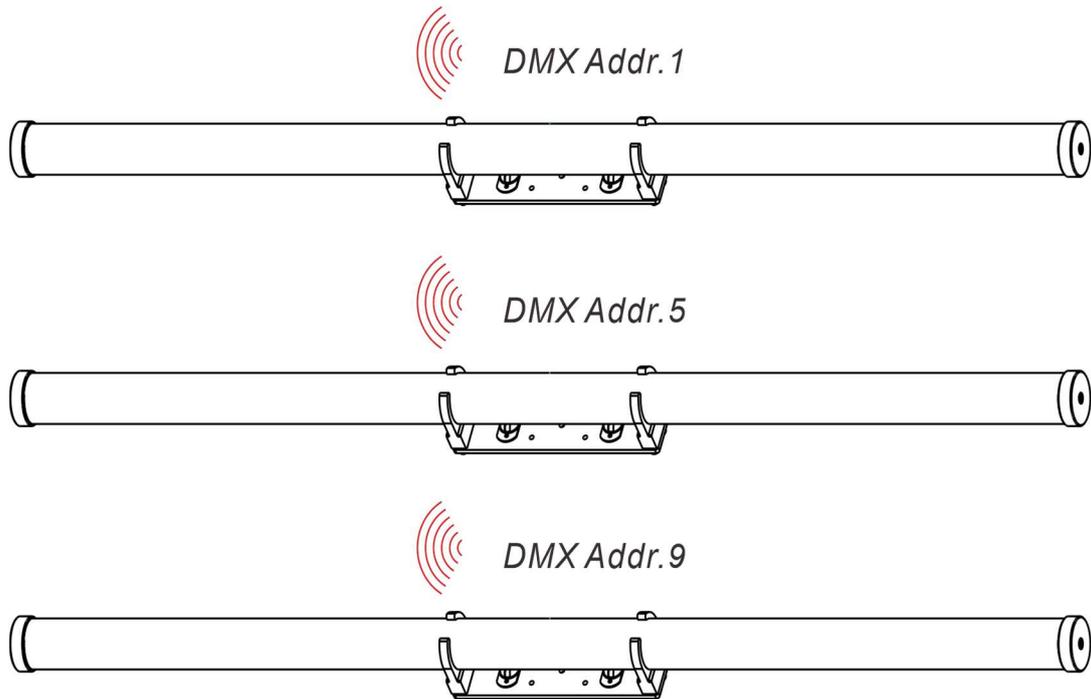

- ❖ Wireless DMX transmitter should be connected to the DMX-512 controller.
- ❖ Since CH4 MODE has 4 channels, address code with 4 increment increasing progressively (e.g., 1,5,9,13...)
- ❖ Every DMX address code can be reused as needed.
- ❖ DMX address code can be any data

## 2.2 2.4G-Wireless Master-Slave Connection Method


As below:



- ❖ Establish wireless communication between WIFI control of mobile phone and WIFI control of lights according to 3.5.7.
- ❖ Set the wireless DMX signal of the first light to the sending state (Master), and the wireless DMX signal of other lights to the receiving state (Slave).
- ❖ When the Slave is set to DMX512 control mode, running auto effect or other static colors on the phone APP to achieve the wireless master-slave synchronization.
- ❖ The DMX address code of the Master and Slave can be any data between 001 and 512 without affecting master-slave online.

# 3 Operation Method

## 3.1 Back panel function's introduction

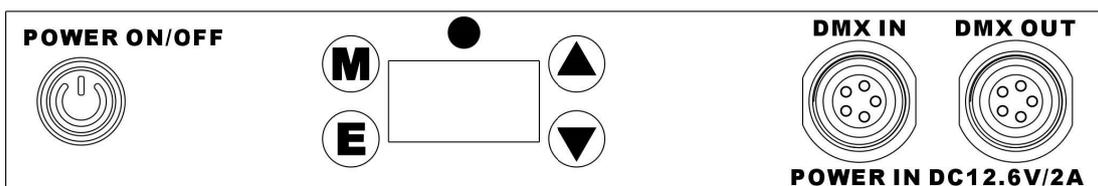

- **M**: Menu button/return button, enter the menu selection interface or previous menu.
- **E**: Confirmation button, used to confirm the selected function.
- **▲ / ▼**: Upward/downward select function or Parameter increment / decrement.
- **POWER IN DC12.6V/2A**: Charging port, both available.
- **DMX IN / OUT**: DMX-512 signal Input / Output.


## 3.2 2.4G Wireless DMX Connection Method

---

### 3.2.1 Working mode

2.4G wireless DMX transceiver uses the W-DMX communication protocol which has two working modes: Transmit mode and Receive mode.

- Find **【Set】** menu and press **【ENTER】** to enter system settings menu.
- Press **【UP/DOWN】** key to select **【Wireless 2.4g】** to enter 2.4g wireless DMX settings menu.
- **【 WIRELESS 】** for wireless DMX control ON/OFF. **【CONNECT】** means the paired connection of wireless DMX module. **【RESET】** means reset the data of wireless DMX control setting, **【MODE】** has transmitting mode and receiving mode.

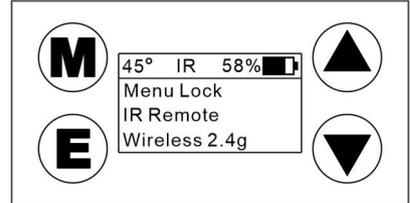


WORKING MODE	ACTION	STATUS DESCRIPTION
W-DMX Receive	White	Connection is not established
	Red fast flash	Connection is lost
	Green fast flash	Connecting to transmitter
	Green slow flash	Connected. Without DMX signal
	Green	Connected. Receiving DMX signal
W-DMX Transmit	Red	Deleting all receivers' connection
	Blue fast flash	Connecting with the Receiver(s)
	Blue slow flash	No DMX signal input
	Blue	Transmitting DMX signal

**Note:** The wireless transceiver will remember the chosen protocol even after you disconnect the power supply. There is no need for repeated setting.

### 3.2.2 Working mode

- According to step 3.2.1 set the Slave to **【Receive】** mode.
- Select **【Reset】** menu to reset wireless connection. At this time, the indicator light is white, indicating that the wireless module is not connected to transmit module and is ready to receive the paired signal.
- According to step 3.2.1 set the Master to **【Transmit】** mode. At this time, the indicator light is blue slow flash, indicating that the wireless module is not connected to DMX signal.
- Select **【Reset】** menu to reset wireless connection. At this time, the indicator light is red, indicating that the connected receiving module is being deleted.
- Select **【CONNECT】** to transmit wireless paired signal, at this time the indicator light is blue fast flash.
- When the Slave receive the paired signal from Master, the indicator light is Green fast flash which means the connection is established.

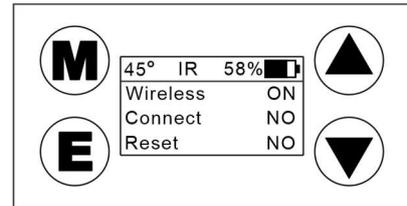

### 3.3 Infrared Remote Controller Instruction

---




- ◇ Dimming up
- ◇ Dimming down
- ◇ Off: light off
- ◇ ON: light on
- ◇ R / G / B / W for 4 single color, A / UV (None)
- ◇ 9 number keys means 9 kinds of static mix color (AC1.....AC9)
- ◇ The "0" key for is to enter DMX-512 control state

- ✧ AUTO key is color change mode, press up and down key to adjust speed
- ✧ STROBE key is in color strobe mode (32 types are optional), press up and down key to adjust speed.
- ✧ FADE key is for color fading mode, press up and down key to adjust speed.
- ✧ SOUND key is for sound control mode, press up and down key to adjust the sound control sensitivity.

**Note:** The IR remote controller should be pointed at the IR infrared receiver.

### 3.4 Menu Display

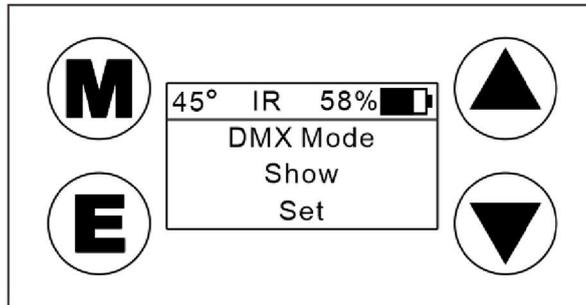


### 3.5 Menu Overview

Main menu	Primary menu	Sub-menu	Function	Note
DMX Mode	001--512		DMX address setting and Receive mode	DMX console mode
Show	Auto	Auto Mode: 0-68	68 kinds of Auto effect	Auto mode
		Speed: 1-16	1-16 from slow to fast on speed setting	
		Color: 0-15	Color setting, <b>0</b> for automatic color change, a total of 15 colors	
	Sound	Sound Mode: 1-4	4 sound control modes optional	Sound mode
		Sens: 1-100	Sound sensitivity setting	
		Color : 0-15	Color setting, <b>0</b> for automatic color change, a total of 15 colors	
	Static	Dimmer: 000-255	Overall dimming	Static color mode
		Strobe: 000-255	Strobe	
		Red: 000-255	Red dimming	
		Green: 000-255	Green dimming	
Blue: 000-255		Blue dimming		
	White: 000-255	White dimming		

	Color	Red	Cyan	Blue+W	Built in static color mode	
		Green	Purple	Yellow+W		
		Blue	Warm White	Cyan+W		
		White	Red+W	Purple+W		
		Yellow	Green+W	Full		
CCT	2800K, 3000K, 3200K, 3500K, 3800K, 4000K, 4500K, 5000K, 5600K, 6000K, 6500K, 7000K, 7500K, 8000K, 8500K, 9000K, 9500K, 10000K,			Color temperature mode		
WIFI	On the phone, connect WIFI address "Led_XXX" and turn on the APP 【LED LAMP】 control			WIFI mode		
Set	DMX Channel	2CH/4CH/6CH/11CH/32CH/64CH/128CH		7 DMX channel modes		
	DMX Fail	Hold / Blackout		Status of light fixture after DMX fail		
	Display Reverse	OFF / ON		Display Reverse OFF / ON		
	Display On Time	ON / 30S / 60S		Display start time		
	Menu Lock	OFF / ON		When Menu Lock is ON, the button will be locked after 30 seconds without any operation, and press the UP+DOWN button for 5 seconds to unlock.		
	IR Remote	OFF / ON		Infrared remote control OFF / ON		
	Wireless 2.4g	Wireless	OFF / ON		Wireless DMX OFF / ON	
		Connect	NO / YES			
		Reset	NO / YES			
Mode		Receive / Transmit				
Factory Set	1.Red	0-255		Limit the red brightness value,		
				factory default value is 220		
	2.Green	0-255		Limit the green brightness value, factory default value is 220		
	3.Blue	0-255		Limit the blue brightness value, factory default value is 220		
	4.White	0-255		Limit the white brightness value, factory default value is 220		
	5.State	Single / Whole		Single: only the current color, Whole: full color working		
	6. T.Limit	40-100		Set the start temperature of temperature protection		


	Factory Reset	NO / YES	YES: Restore factory settings
Info	Name		MAGIC
	Version		V1.0

### 3.5.1 DMX Address Settings (Dmx512)

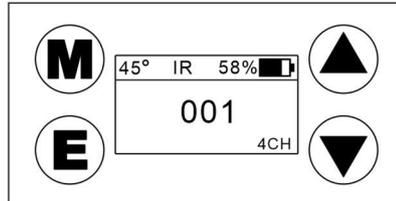


- Find **【DMX Mode】** menu and press **【ENTER】** to enter DMX address code setting.
- Press **【UP/DOWN】** button to adjust parameters.
- After setting the DMX address code, press **【ENTER】** to save the settings.

### 3.5.2 Auto Effect Settings (Auto)

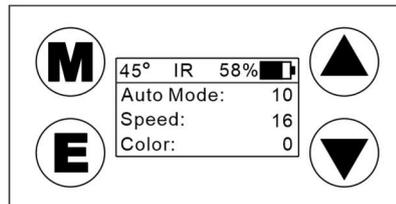

- Find **【Auto】** menu and press **【ENTER】** to enter auto effect setting.
- Press **【UP/DOWN】** button to select **【Auto Mode】** , **【Speed】** or **【Color】** .
- Press **【ENTER】** to enter the settings.
- Press **【UP/DOWN】** button to select auto effect, speed, or color, press **【ENTER】** to save the settings.

### 3.5.3 Sound Effect Settings (Sound)

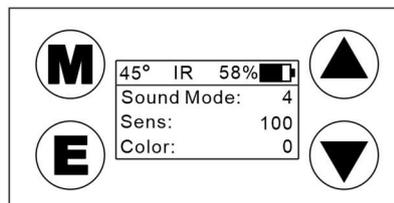


- Find **【Sound】** menu and press **【ENTER】** to enter sound effect setting.
- Press **【UP/DOWN】** button to select **【Sound Mode】** , **【Sens】** or **【Color】** .
- Press **【ENTER】** to enter the settings.

- Press **【UP/DOWN】** button to select sound effect, sound control sensitivity or color effect, press **【ENTER】** to save the settings.

### 3.5.4 Static Color Settings (Static)


---

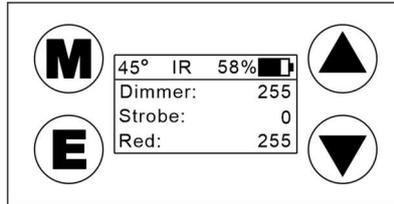

- Find **【Static】** menu and press **【ENTER】** to enter static color setting.
- Press **【UP/DOWN】** button to select **【Dimmer】** , **【Strobe】** , **【Red】** , **【Green】** , **【Blue】** or **【White】** .
- Press **【ENTER】** to confirm menu and press **【UP/DOWN】** button to adjust parameters, then press **【ENTER】** to save the settings.

### 3.5.5 Built-in Static Color Settings (Color)


---

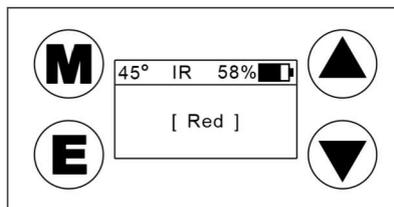

- Find **【Color】** menu and press **【ENTER】** to enter built-in static color setting.
- Press **【UP/DOWN】** button to select **【Red】** , **【Green】** , **【Blue】** ... 15 built-in colors.
- Press **【ENTER】** to save the settings.

### 3.5.6 Color Temperature Settings (CCT)

---

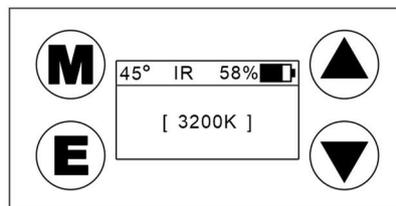


- Find **【CCT】** menu and press **【ENTER】** to enter color temperature setting.
- Press **【UP/DOWN】** button to select **【2800K】** **【3000K】** **【3200K】** ... 18 kinds of color temperature effect.
- Press **【ENTER】** to save the settings. Hold **【ENTER】** for more than 3 seconds to enter the screen for customizing the current color temperature.

- Built-in **【Red】** , **【Green】** , **【Blue】** , **【White】** 4 base colors with 0~255 brightness adjustment, can freely customize the current color temperature according to your needs.

### 3.5.7 Mobile APP Control Mode Settings (WIFI)


---

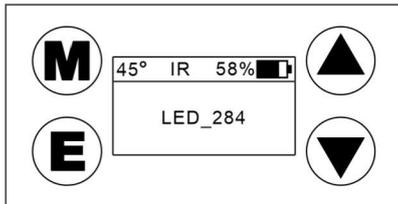

- Find **【WIFI】** menu and press **【ENTER】** to turn on WIFI.
- "Led\_XXX" displayed on the screen is the WIFI address of the light fixture.
- Scan the above QR code to install **【LED LAMP】** APP first on mobile phone.
- On the phone, find WIFI and search WIFI address, and the words beginning with LED appear. For example, "LED-XXX", click the link.
- Turn on the **【LED LAMP】** APP installed on the phone and show the link is successful then you can control it.

### 3.5.8 System Settings (Set)


---

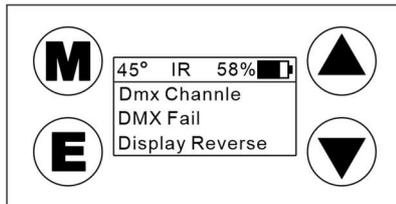

- Find **【Set】** menu and press **【ENTER】** to enter system setting.
- Press **【UP/DOWN】** button to select corresponding function setting.
- After setting, press **【ENTER】** to save the settings.

### 3.5.9 Factory Settings (Factory Set)

---

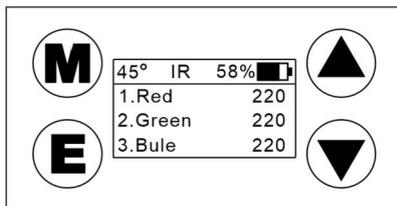


- Find **【Factory】** menu and press **【ENTER】** to enter factory setting.
- Press **【UP/DOWN】** button to select corresponding function setting.
- After setting, press **【ENTER】** to save the settings.

**Note:** This the factory default setting, do not change it if unnecessary.

### 3.5.10 Menu Lock Function (Menu Lock)


---

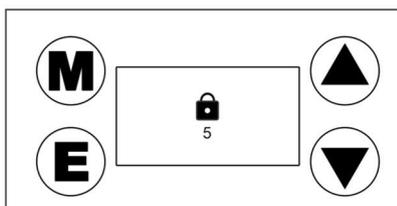

- Form **【Set】** menu to find **【Menu Lock】** menu.
- Press **【ENTER】** button to enter select **【ON】** .
- When the menu locked, at the same time long press button **▼▲** , the display appears a small lock icon and have a number count down to "0", it will unlock successfully.

### 3.5.11 Charging Display

---

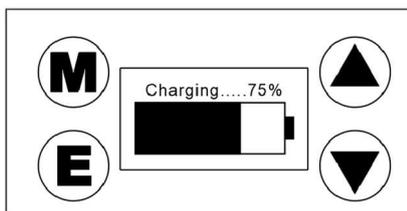

**Note:** In the process of charging, the display screen will have a charging display. If the lamp needs to work while charging, long press **【MENU】** button to enter for operate menu.

# 4 Control Channel

## 4.1 DMX Channel Table

### 4.1.1----2CH 2CH Mode:

Channel	DMX Data	Control function	Detail description
1	0 ⇐⇒ 255	Overall dimmer	Linear dimming from 0~100%
2	0 ⇐⇒ 10	NO FUNCTION	CCT
	11 ⇐⇒ 24	2800K	
	25 ⇐⇒ 38	3000K	
	39 ⇐⇒ 52	3200K	
	53 ⇐⇒ 66	3500K	
	67 ⇐⇒ 80	3800K	
	81 ⇐⇒ 94	4000K	
	95 ⇐⇒ 108	4500K	
	109 ⇐⇒ 122	5000K	
	123 ⇐⇒ 136	5600K	
	137 ⇐⇒ 150	6000K	
	151 ⇐⇒ 164	6500K	
	165 ⇐⇒ 178	7000K	
	179 ⇐⇒ 192	7500K	
	193 ⇐⇒ 206	8000K	
	207 ⇐⇒ 220	8500K	
	221 ⇐⇒ 234	9000K	
235 ⇐⇒ 248	9500K		
249 ⇐⇒ 255	10000K		

### 4.1.2----4CH 4CH Mode:

Channel	DMX Data	Control function	Detail description
1	0 ⇐⇒ 255	Red dimmer	Linear dimming from 0~100%
2	0 ⇐⇒ 255	Green dimmer	Linear dimming from 0~100%
3	0 ⇐⇒ 255	Blue dimmer	Linear dimming from 0~100%
4	0 ⇐⇒ 255	White dimmer	Linear dimming from 0~100%

### 4.1.3----6CH 6CH Mode:

Channel	DMX Data	Control function	Detail description
---------	----------	------------------	--------------------

1	0 ↔ 255	Overall dimmer	Linear dimming from 0~100%
2	0 ↔ 10	Strobe	NO FUNCTION
	11 ↔ 255		From slow to fast(1HZ-20HZ)
3	0 ↔ 255	Red dimmer	Linear dimming from 0~100%
4	0 ↔ 255	Green dimmer	Linear dimming from 0~100%
5	0 ↔ 255	Blue dimmer	Linear dimming from 0~100%
6	0 ↔ 255	White dimmer	Linear dimming from 0~100%

4.1.4----11CH 11CH Mode:

Channel	DMX Data	Control function	Detail description
1	0 ↔ 255	Overall dimmer	Linear dimming from 0~100%
2	0 ↔ 10	Strobe	NO FUNCTION
	11 ↔ 255		From slow to fast(1HZ-20HZ)
3	0 ↔ 10	Static macro	NO FUNCTION
	11 ↔ 255		17 values for each color
4	0 ↔ 10	Macro background color	NO FUNCTION
	11 ↔ 255		17 values for each color
5	0 ↔ 255	Macro background color brightness	Linear dimming from 0~100%
6	0 ↔ 10	Macro	NO FUNCTION
	11 ↔ 200		3 values for each macro effect
	201 ↔ 215		Sound control mode 1
	216 ↔ 230		Sound control mode 2
	231 ↔ 245		Sound control mode 3
	246 ↔ 255		Sound control mode 4
7	0 ↔ 255	Macro speed	From slow to fast
8	0 ↔ 255	Red dimmer	Linear dimming from 0~100%
9	0 ↔ 255	Green dimmer	Linear dimming from 0~100%
10	0 ↔ 255	Blue dimmer	Linear dimming from 0~100%
11	0 ↔ 255	White dimmer	Linear dimming from 0~100%

4.1.5----32CH 32CH Mode:

Channel	DMX Data	Control function	Detail description
1	0 ↔ 255	Red 1 dimmer	Linear dimming from 0~100%
2	0 ↔ 255	Green 1 dimmer	Linear dimming from 0~100%
3	0 ↔ 255	Blue 1 dimmer	Linear dimming from 0~100%
4	0 ↔ 255	White 1 dimmer	Linear dimming from 0~100%

...	...	.....	...
29	0 ⇐ ⇒ 255	Red 8 dimmer	Linear dimming from 0~100%
30	0 ⇐ ⇒ 255	Green 8 dimmer	Linear dimming from 0~100%
31	0 ⇐ ⇒ 255	Blue 8 dimmer	Linear dimming from 0~100%
32	0 ⇐ ⇒ 255	White 8 dimmer	Linear dimming from 0~100%

4.1.6----64CH 64CH Mode:

Channel	DMX Data	Control function	Detail description
1	0 ⇐ ⇒ 255	Red 1 dimmer	Linear dimming from 0~100%
2	0 ⇐ ⇒ 255	Green 1 dimmer	Linear dimming from 0~100%
3	0 ⇐ ⇒ 255	Blue 1 dimmer	Linear dimming from 0~100%
4	0 ⇐ ⇒ 255	White 1 dimmer	Linear dimming from 0~100%
...	...	.....	...
61	0 ⇐ ⇒ 255	Red 16 dimmer	Linear dimming from 0~100%
62	0 ⇐ ⇒ 255	Green 16 dimmer	Linear dimming from 0~100%
63	0 ⇔ 255	Blue 16 dimmer	Linear dimming from 0~100%
64	0 ⇔ 255	White 16 dimmer	Linear dimming from 0~100%

4.1.7----128CH 128CH Mode:

Channel	DMX Data	Control function	Detail description
1	0 ⇐ ⇒ 255	Red 1 dimmer	Linear dimming from 0~100%
2	0 ⇐ ⇒ 255	Green 1 dimmer	Linear dimming from 0~100%
3	0 ⇐ ⇒ 255	Blue 1 dimmer	Linear dimming from 0~100%
4	0 ⇐ ⇒ 255	White 1 dimmer	Linear dimming from 0~100%
...	...	.....	...
125	0 ⇐ ⇒ 255	Red 32 dimmer	Linear dimming from 0~100%
126	0 ⇐ ⇒ 255	Green 32 dimmer	Linear dimming from 0~100%
127	0 ⇐ ⇒ 255	Blue 32 dimmer	Linear dimming from 0~100%
128	0 ⇐ ⇒ 255	White 32 dimmer	Linear dimming from 0~100%

# 5 Maintenance

## 5.1 Product Maintenance

---

To prolong the life of the product, it is very important to do maintenance work. The environment is harsh outdoors, or if the product is idle for a long time, damp, smoke or particularly dirty surroundings can cause greater accumulation of dirt on its LED lens cover, fan vents and housing. So, it should be cleaned to maintain an optimum light output and at the same time to prevent it from being corrupted by acid gas.

Cleaning frequency depends on the environment in which the fixture operates. Soft cloth and typical glass cleaning products should be used for cleaning. It is recommended to clean product at least once every 20 days.

**Friendly notice: Please do not use any organic solvent, e.g., alcohol to clean housing of the apparatus, it will cause damage.**

## 5.2 Trouble Shooting

---

Problems	Action
The product doesn't switch on	The battery is dead. Charging it.
	Power supply is damaged or abnormal. Call a qualified personnel to fix it.
	Control section is damaged. Call a qualified personnel to fix it.
	Connection of internal circuitry is not correct. Call a qualified personnel to fix it.
The product can turn on, but LEDs do not emit light and are out of control	DMX address is wrongly setting up. Resetting it according to instruction book.
	DMX Signal wrongly connected. Connect it correctly according to instruction book.
	Control section is damaged. Call a qualified personnel to fix it.