


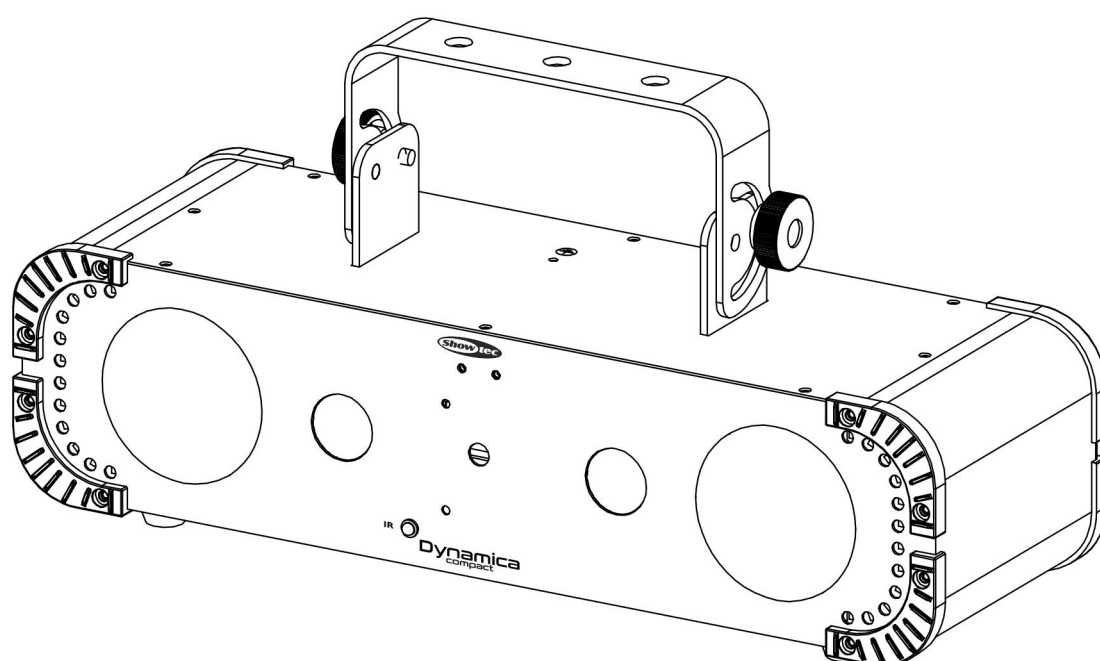

Dynamica Compact

Product code: 43176

Preface

Thank you for purchasing this Showtec product.

The purpose of this user manual is to provide instructions for the correct and safe use of this product.

Keep the user manual for future reference as it is an integral part of the product. The user manual shall be stored at an easily accessible location.

This user manual contains information concerning:

- Safety instructions
- Intended and non-intended use of the device
- Installation and operation of the device
- Maintenance procedures
- Troubleshooting
- Transport, storage and disposal of the device

Non-observance of the instructions in this user manual may result in serious injuries and damage of property.

©2025 Showtec. All rights reserved.

No part of this document may be copied, published or otherwise reproduced without the prior written consent of Highlite International.

Design and product specifications are subject to change without prior notice.

For the latest version of this document or other language versions, please visit our website www.highlite.com or contact us at service@highlite.com.

Highlite International and its authorized service providers are not liable for any injury, damage, direct or indirect loss, consequential or economic loss or any other loss arising from the use of, or inability to use or reliance on the information contained in this document.

Highlite International B.V. – Vestastraat 2 – 6468 EX Kerkrade – the Netherlands

Table of contents

1. Introduction.....	4
1.1. Before Using the Product.....	4
1.2. Intended Use.....	4
1.3. LEDs Lifespan.....	4
1.4. Product Lifespan.....	4
1.5. Text Conventions.....	5
1.6. Symbols and Signal Words.....	5
1.7. Laser Hazard Labels.....	6
1.8. Symbols on the Information Label.....	6
2. Safety.....	7
2.1. Warnings and Safety Instructions.....	7
2.2. Requirements for the User.....	9
2.3. Laser Safety.....	10
3. Description of the Device.....	11
3.1. Front view.....	11
3.2. Back View.....	12
3.3. Product Specifications.....	13
3.4. Dimensions.....	14
4. Installation.....	15
4.1. Safety Instructions for Installation.....	15
4.2. Personal Protective Equipment.....	16
4.3. Installation Site Requirements.....	16
4.4. Rigging.....	16
4.5. Angle Adjustment.....	17
4.6. Connecting to Power Supply.....	17
4.7. Power Linking of Multiple Devices.....	18
5. Setup.....	19
5.1. Warnings and Precautions.....	19
5.2. Stand-alone Setup.....	19
5.3. DMX Connection	19
5.3.1. DMX-512 Protocol.....	19
5.3.2. DMX Cables.....	20
5.3.3. Master/Slave Setup.....	20
5.3.4. DMX Linking.....	21
5.3.5. DMX Addressing.....	21
6. Operation.....	22
6.1. Safety Instructions for Operation.....	22
6.2. Control Modes.....	23
6.3. Control Panel.....	24
6.4. Start-up.....	24
6.5. Menu Overview.....	25
6.6. Main Menu Options.....	25
6.6.1. Auto Mode.....	25
6.6.2. Sound Mode.....	25
6.6.3. DMX Mode.....	26
6.6.4. Slave Mode.....	26
6.6.5. Settings.....	26
6.6.5.1. Display Backlight.....	26
6.6.5.2. Display Invert.....	27
6.6.5.3. Reset.....	27
6.7. Remote Control.....	27
6.7.1. Remote Control Mode.....	27
6.7.2. Functions of the Remote Control Buttons.....	28
6.7.3. Remote Control Operation.....	29
6.7.3.1. IR Auto Mode.....	29
6.7.3.2. IR Sound-controlled Mode.....	29
6.8. DMX Channels.....	30

7. Troubleshooting.....	33
8. Maintenance.....	34
8.1. Safety Instructions for Maintenance.....	34
8.2. Preventive Maintenance.....	34
8.2.1. Basic Cleaning Instructions.....	34
8.3. Corrective Maintenance.....	35
8.3.1. Replacing the Fuse.....	35
9. Deinstallation, Transportation and Storage.....	36
9.1. Instructions for Deinstallation.....	36
9.2. Instructions for Transportation.....	36
9.3. Storage.....	36
10. Disposal.....	36
11. Approval.....	36

1. Introduction

1.1. Before Using the Product

**Important**

Read and follow the instructions in this user manual before installing, operating or servicing this product.


The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual.

After unpacking, check the contents of the box. If any parts are missing or damaged, contact your Highlite International dealer.

Your shipment includes:

- Showtec Dynamica Compact
- Schuko to IEC power cable (1,5 m)
- IR remote control
- User manual

Figure 1

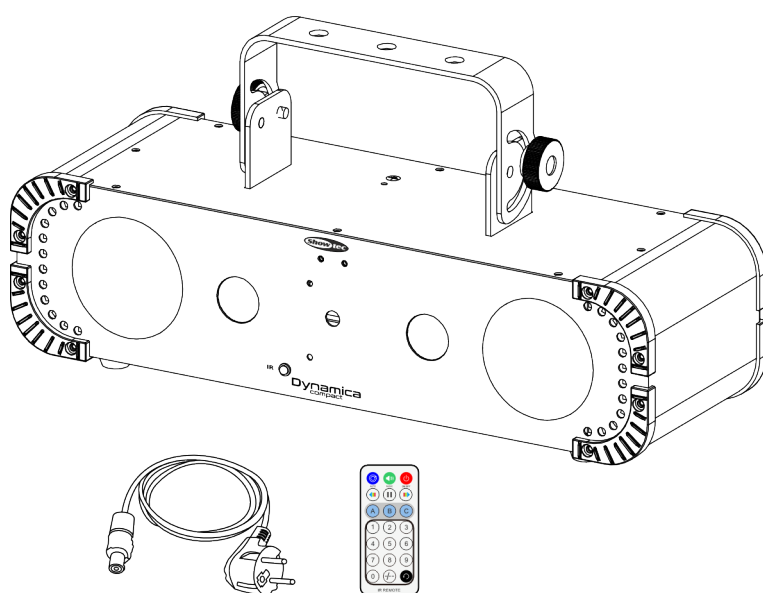

1.2. Intended Use

This device is intended for professional use as a light effect with a laser projector. It can be installed only indoors. This device is not suitable for households.

Any other use, not mentioned under intended use, is regarded as non-intended and incorrect use.

1.3. LEDs Lifespan

The light output of the LEDs gradually decreases over time (lumen depreciation). High operating temperatures contribute to this process. You can extend the lifespan of the LEDs by providing adequate ventilation and operating the LEDs at the lowest possible brightness.

1.4. Product Lifespan

This device is not designed for permanent operation.

Disconnect the device from the electrical power supply when the device is not in operation. This will reduce the wear and will improve the lifespan of the device.

1.5. Text Conventions

Throughout the user manual the following text conventions are used:

- Buttons: All buttons are in bold lettering, for example "Press the **UP/DOWN** buttons"
- References: References to parts of the device are in bold lettering, for example: "turn the **adjustment handle (05)**". References to chapters are hyperlinked
- 0–255: Defines a range of values
- Notes: **Note:** (in bold lettering) is followed by useful information or tips

1.6. Symbols and Signal Words

Safety notes and warnings are indicated throughout the user manual by safety signs.

Always follow the instructions provided in this user manual.

**DANGER**

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

**WARNING**

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

**CAUTION**

Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.

**Attention**

Indicates important information for the correct operation and use of the product.

**Important**


Read and observe the instructions in this document.

**Electrical hazard****Laser beam hazard**

Provides important information about the disposal of this product.

1.7. Laser Hazard Labels

The device is a class 3R laser device and is provided with the following labels and hazard warnings. The position of the labels is indicated on the drawings.

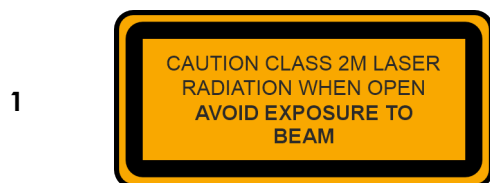



WARNING
Caution Class 2 laser
Radiation when open
Avoid exposure to beam



WARNING
Avoid exposure – laser
radiation is emitted from this
aperture



CAUTION
Laser radiation
Avoid direct eye exposure
Class 2 laser product
Max Power: 1 mW
Wavelength: 400–695 nm
EN-IEC 60825-1:2014
Do not stare into beam
Never aim at aircraft
It is unsafe and illegal

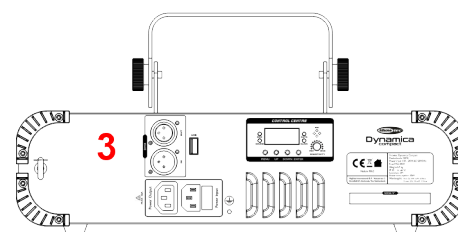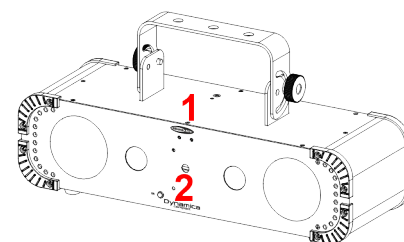

1.8. Symbols on the Information Label

This product is provided with an information label. The information label is located on the back side of the device.

The information label contains the following symbols:



This device is designed for indoor use.



This device shall not be treated as household waste.



Read and follow the instructions in the user manual before installing, operating or servicing the device.



This device falls under IEC protection class I.



Caution: Risk of electric shock, Disconnect input power before opening.
Warning: This appliance must be earthed.

2. Safety

**Important**

Read and follow the instructions in this user manual before installing, operating or servicing this product.

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual.

2.1. Warnings and Safety Instructions

**DANGER**

Danger for children

For adult use only. The device must be installed beyond the reach of children.

- Do not leave any parts of the packaging (plastic bags, polystyrene foam, nails, etc.) within the reach of children. Packaging material is a potential source of danger for children.

**DANGER**

Electric shock caused by dangerous voltage inside

There are areas inside the device where dangerous touch voltage may be present.

- Do not open the device or remove any covers.
- Do not operate the device if the covers or the housing are open. Before operation, check if the housing is firmly closed and all screws are tightly fastened.
- Disconnect the device from the electrical power supply before service and maintenance, and when the device is not in use.

**DANGER**

Electric shock caused by short-circuit

This device falls under IEC protection Class I.

- Make sure that the device is electrically connected to ground (earth). Connect the device only to a socket-outlet with a ground (earth) connection.
- Do not cover the ground (earth) connection.
- Do not bypass the thermostatic switch or fuses.
- Replace fuses only with the same type and rating.
- Do not let the power cable come into contact with other cables. Handle the power cable and all connections with the mains with caution.
- Do not modify, bend, mechanically strain, put pressure on, pull or heat up the power cable.
- Make sure that the power cable is not crimped or damaged. Examine the power cable periodically for any defects.
- Do not immerse the device in water or other liquids. Do not install the device in a location where flooding may occur.
- Do not use the device during thunderstorms. Disconnect the device from the electrical power supply immediately.

**CAUTION**
Laser radiation

This device is a class 2M laser device according to the classification in NEN-EN-IEC 60825-1:2014. It emits visible radiation in the wavelength range 400–700 nm. Short term exposure (max 0,25 s) is not hazardous to the eye. Deliberate staring into the laser beam may cause eye injury.

Check all applicable national and international regulations concerning laser safety before using this device. The user is responsible for the safety of all persons present during the use of the laser device.

- Do not stare into the laser beam.
- Do not expose users of telescopic optics, such as binoculars, to this device.
- Do not look into the laser beam with telescopic optics, such as binoculars.
- Do not open the device and do not modify the device.
- Do not use the device if the housing or the optics are damaged.
- Do not point the laser beam at persons or animals.
- Make sure that the beam is terminated on a non-reflective and non-combustible surface.

**Attention**
Power supply

- Before connecting the device to the power supply, make sure that the current, voltage and frequency match the input voltage, current and frequency specified on the information label on the device.
- Make sure that the cross-sectional area of the extension cords and power cables is sufficient for the required power consumption of the device.

**Attention**
General safety

- Do not insert objects into air vents.
- Do not connect the device to a dimmer pack.
- Do not switch the device on and off in short intervals. This reduces the device's life.
- Do not shake the device. Avoid brute force when installing or operating the device.
- Change the aperture glass if it is visibly damaged. Contact your Highlite International dealer for more information, as servicing can be performed only by instructed or skilled persons.
- Change the lens or the LEDs if they are visibly damaged to such an extent that their effectiveness is impaired, for example by cracks or deep scratches. Contact your Highlite International dealer for more information, as servicing can be performed only by instructed or skilled persons.
- If the device is dropped or struck, disconnect the device from the electrical power supply immediately.
- If the device is exposed to extreme temperature variations (e.g. after transportation), do not switch it on immediately. Let the device reach room temperature before switching it on, otherwise it may be damaged by the formed condensation.
- If the device fails to work properly, discontinue use immediately.

**Attention**
For professional use only
This device must be used only for the purposes it is designed for.

This device is designed to be used as a light effect with a laser projector. Any incorrect use may lead to hazardous situations and result in injuries and material damage.

- This device is not suitable for households.
- This device is not designed for permanent operation.
- This device does not contain user-serviceable parts. Unauthorized modifications to the device will render the warranty void. Such modifications may result in injuries and material damage.

**Attention****Before each use, examine the device visually for any defects.**

Make sure that:

- All screws used for installing the device or parts of the device are tightly fastened and are not corroded.
- The safety devices are not damaged.
- There are no deformations on housings, fixings and installation points.
- The lens and the aperture glass are not cracked or damaged.
- The power cables are not damaged and do not show any material fatigue.

**Attention****Do not expose the device to conditions that exceed the rated IP class conditions.**

This device is IP20 rated. IP (Ingress Protection) 20 class provides protection against solid objects greater than 12 mm, such as fingers, and no protection against harmful ingress of water.

2.2. Requirements for the User

This product may be used only by instructed or skilled persons. Installation and maintenance may be carried out by instructed or skilled persons. Service shall be carried out only by skilled persons. Contact your Highlite International dealer for more information.

This product may not be used by ordinary persons. Users, operators and installers should have received sufficient training in laser safety to be able to accurately assure that the maximum permissible exposure (MPE) is not exceeded in spectator occupied areas and that the required separations are maintained between spectators and projections that exceed the MPE.

Instructed persons have been instructed and trained by a skilled person, or are supervised by a skilled person, for specific tasks and work activities associated with the installation, service and maintenance of this product, so that they can identify risks and take precautions to avoid them.

Skilled persons have training or experience, which enables them to recognize risks and avoid hazards associated with the installation, service and maintenance of this product.

Ordinary persons are all persons other than instructed persons and skilled persons. Ordinary persons include not only users of the product but also any other persons that may have access to the device or who may be in the vicinity of the device.

2.3. Laser Safety

**CAUTION**

Use of controls or adjustments, or performance of procedures other than those specified in this user manual, may result in hazardous radiation exposure.

Check all applicable national and international regulations concerning laser safety before operating this device. In some countries, there may be specific requirements, such as government permissions or notifications of shows, or prohibitions, such as against laser scanning of spectators without appropriate safeguards.

Laser displays and shows, where class 3B and/or class 4 lasers are used, should be supervised by a laser safety officer (LSO). LSOs are trained to evaluate and control laser hazards and are responsible for overseeing the control of laser hazards. An LSO is recommended but not required for laser displays and shows, where class 1, 1M, 2, 2M and/or 3R lasers are used.

During laser displays and shows the applicable eye and skin maximum permissible exposure (MPE) may not be exceeded. Under no circumstance should any person be exposed to laser radiation exceeding the applicable eye and skin MPE. MPE for spectators, ancillary personnel and performers is specified in IEC 60825-14, IEC 60825-3, and in the applicable local laser regulations.

Each time before operation of the device, make sure that:

- The beam is aligned and properly terminated
- All controls, including scan failure safeguards and emergency stop controls, are properly working
- Warning signs and barriers are in place as appropriate
- All components are securely mounted and locked into position


The device should be secured and protected against misalignment or maladjustment between alignment completion and the beginning of the laser display or show.

3. Description of the Device

The Showtec Dynamica Compact is a 4-in-1 light effect with beam, strobe, UV wash and laser effects. The beam function is created by 128 RGBWA LEDs, 24 CW LEDs take care of the strobe effects, while the UV wash is created by 2 high-power LEDs. The Class 2M laser has 2 laser diodes that project hundreds of red and green laser beams. Each effect can be controlled individually or they can be combined for an all-in-one light show. The device can also be controlled by DMX, master/slave or IR remote. Up to 8 units can be daisy-chained together.

3.1. Front view


Figure 2

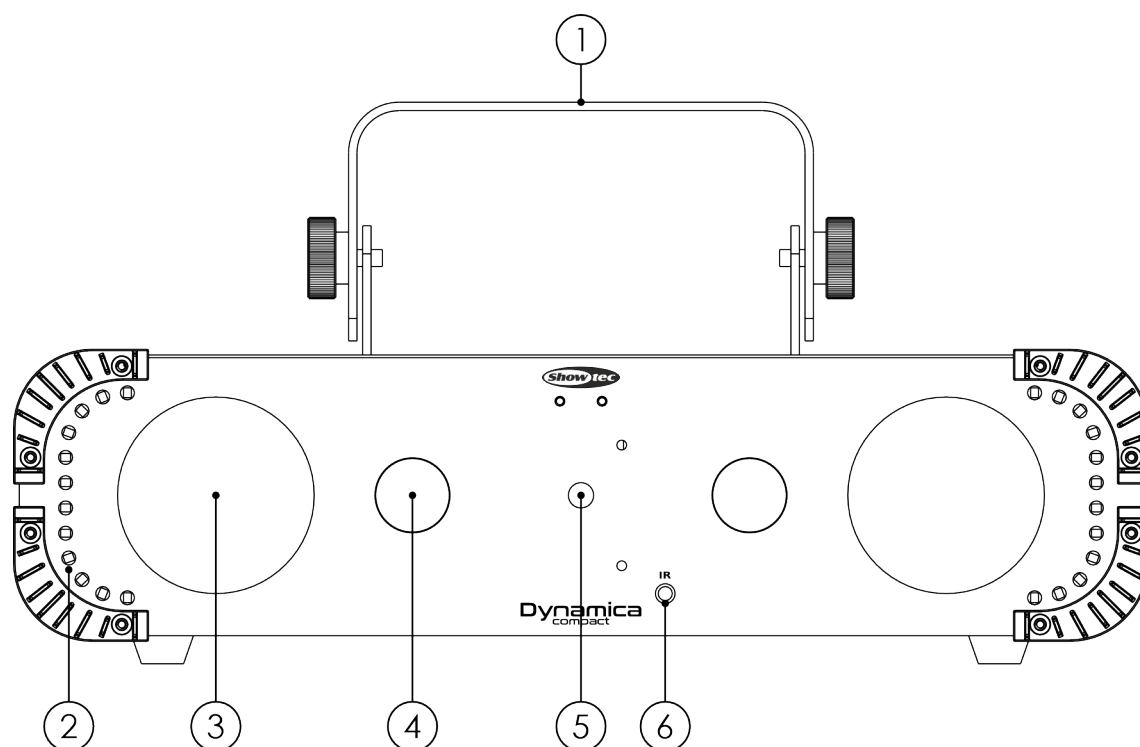

- 01) Mounting bracket
- 02) 24 x CW strobe LEDs
- 03) 128 RGBWA LEDs
- 04) 2 x UV high-power LEDs
- 05) 2 x Laser beam aperture (100 mw red + 30 mW green laser module)
- 06) IR sensor

3.2. Back View

Figure 3

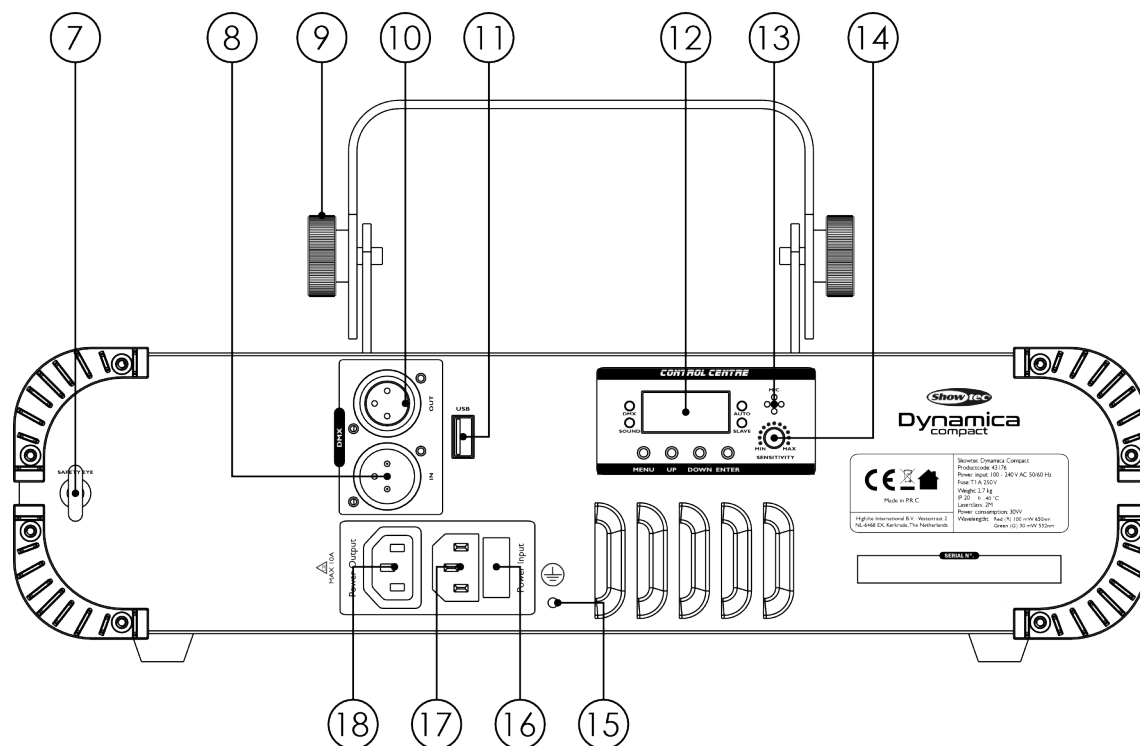

- 07) Safety Eye
- 08) 3-pin DMX signal connector IN
- 09) 2 x adjustment screws
- 10) 3-pin DMX signal connector OUT
- 11) USB connector – no function
- 12) Control panel: 7-segment LED display, control buttons and LED indicators
- 13) Built-in microphone
- 14) Sound sensitivity control
- 15) Ground/earth connection
- 16) Fuse T 1AL / 250V
- 17) IEC power connector IN
- 18) IEC power connector OUT

3.3. Product Specifications

Model:	Dynamica Compact
--------	------------------

Source:

Light source type	Diode / DPSS / LED
LED color type	RGBWA
LED strobe quantity	24
LED strobe power	0.5 W
Laser class	2M
Laser color	Red / green
Laser power (total)	130 mW
Laser power (red)	100 mW
Laser wavelength (red)	650 nm
Laser power (green)	30 mW
Laser wavelength (green)	532 nm

Control and Programming:

Control mode	Auto / DMX / Master Slave / Remote / Sound / Stand Alone
DMX channels	2 / 5 / 10
Protocols	DMX
Display	7-segment LED

Electrical Specifications and Connections:

Power supply	100–240 V AC 50/60 Hz
Power consumption	30 W
Power connector IN	IEC
Power connector OUT	IEC
DMX connector	XLR 3P IN/OUT
DMX connector IN	XLR 3P
DMX connector OUT	XLR 3P

Mechanical Specifications:

Height	145 mm
Width	405 mm
Depth	200 mm
Weight	2,8 kg
IP rating	IP20 (indoor use only)
Housing	Aluminum die-cast
Color	Black

Product Properties:

Cooling	Convection/axial fan
Safety features	Safety eye

Rigging:

Mounting options	Clamp
Safety attachment	Yes

Thermal Specifications:

Maximum ambient temperature	40 °C
Minimum ambient temperature	-5 °C


Included Items:

Included cables

IEC cable

3.4. Dimensions

Figure 4

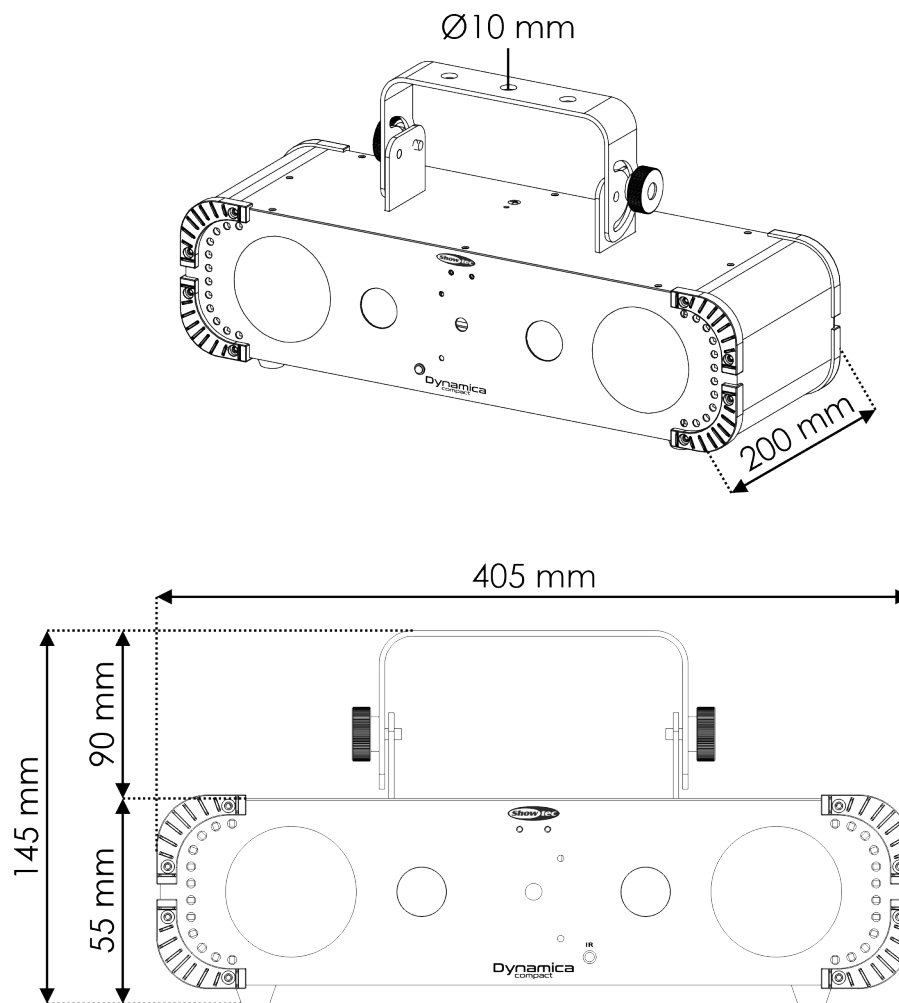

4. Installation

4.1. Safety Instructions for Installation


WARNING


Incorrect installation can cause serious injuries and damage of property.

If trussing systems are used, installation must be carried out only by instructed or skilled persons.

- Make sure that the device is rigidly mounted to prevent movement due to vibration or jarring.
- Follow all applicable European, national and local safety regulations concerning rigging and trussing.


The device should be installed in such a way that there is at least 3 m distance in height and 2,5 m laterally between the laser beam that exceeds the spectator MPE and the surface where spectators are expected to stand.

Figure 5

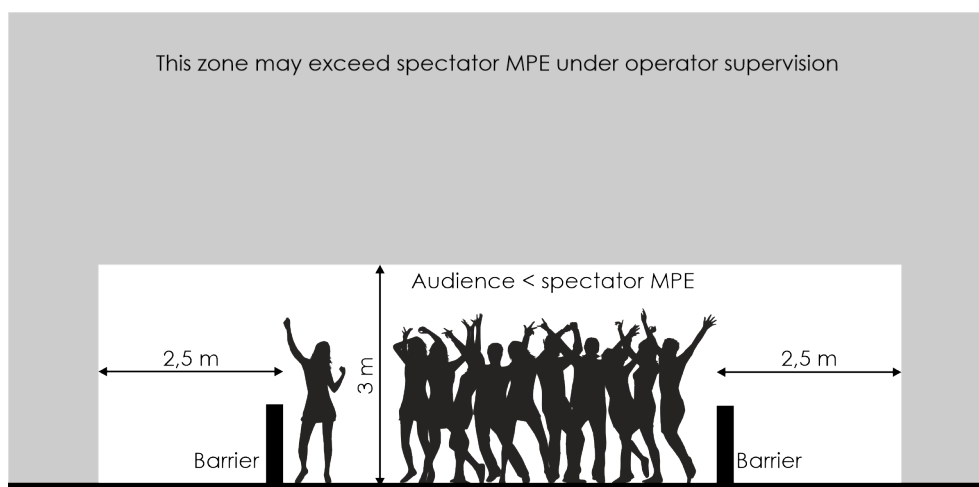

If the laser display or show is not under the continuous control of an operator who can immediately terminate laser radiation in the event of a problem, the MPE shall not exceed 5 times the spectator MPE in the space between 3 m and 6 m above the surface where spectators are expected to stand.

Figure 6

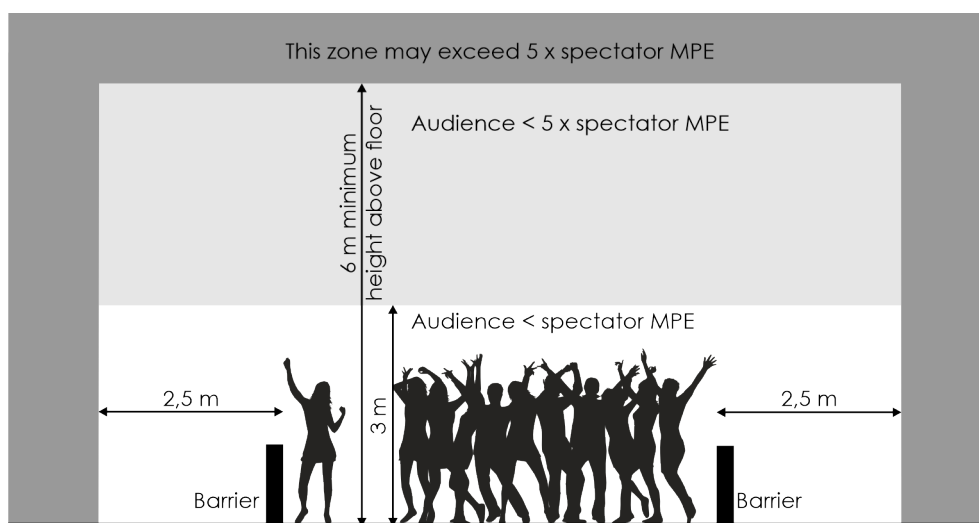

**Attention**

Make sure that there is enough space for ventilation around the device.

- Do not block the ventilation openings. Without proper heat dissipation and air circulation, the internal components may overheat. This can result in product damage.
- Do not install the device near equipment that produces heat, for example spotlights.

4.2. Personal Protective Equipment

During installation, deinstallation and rigging wear personal protective equipment in compliance with the national and site-specific regulations.

4.3. Installation Site Requirements

- The device can be used only indoors.
- The maximum ambient temperature $t_a = 40\text{ °C}$ must never be exceeded.
- The relative humidity must not exceed 50 % with an ambient temperature of 40 °C.

4.4. Rigging

The device can be positioned on a flat surface or mounted to a truss or other rigging structure in any orientation. Make sure that all loads are within the pre-determined limits of the supporting structure.


**CAUTION**

Restrict the access under the work area during rigging/derigging.

To mount the device, follow the steps below:

- 01) Use a clamp to attach the device to the supporting structure. Make sure that the device cannot move freely.
- 02) Secure the device with a secondary suspension, for example a safety cable. Make sure that the secondary suspension can hold 10 times the weight of the device. If possible, the secondary suspension should be attached to a supporting structure independent of the primary suspension. Put the safety cable through the **safety eye (07)**.

Figure 7

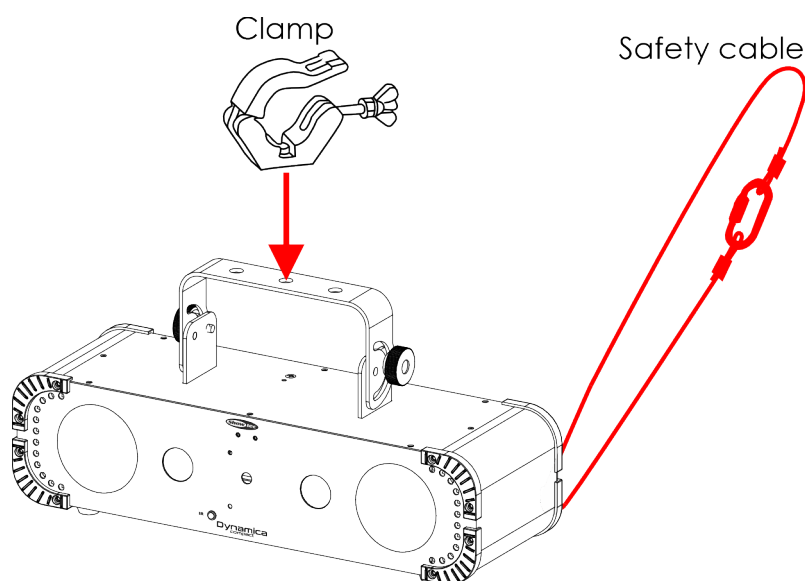


4.5. Angle Adjustment

You can adjust the angle of the device with the **adjustment screw (09)**.

- 01) Turn the **adjustment screw (09)** counterclockwise to loosen it.
- 02) Tilt the device to the desired angle.
- 03) Turn the **adjustment screw (09)** clockwise to tighten it. Make sure that the device cannot move freely after the **adjustment screw (09)** is tightened.

Figure 8

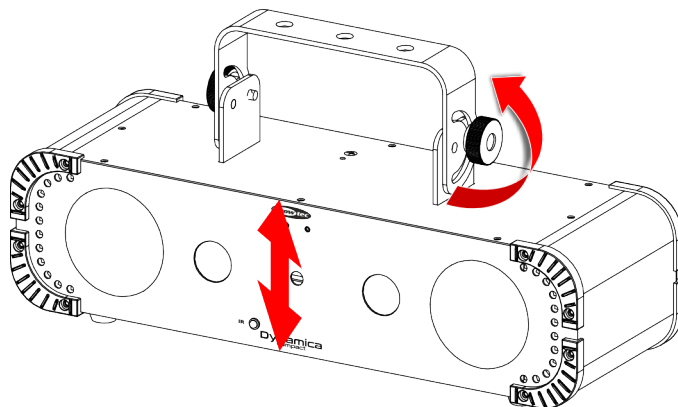

4.6. Connecting to Power Supply



DANGER
Electric shock caused by short-circuit

The device accepts AC mains power at 100–240 V and 50/60 Hz. Do not supply power at any other voltage or frequency to the device.

This device falls under IEC protection class I. Make sure that the device is always electrically connected to the ground (earth).

Before connecting the device to the socket-outlet:

- Make sure that the power supply matches the input voltage specified on the information label on the device.
- Make sure that the socket-outlet has a ground (earth) connection.

Connect the device to the socket-outlet with the power plug. Do not connect the device to a dimmer circuit, as this may damage the device.

4.7. Power Linking of Multiple Devices

This device supports power linking. Power can be relayed to another device via the power OUT connector. Note that the input and the output connectors have different designs: one type cannot be connected to the other.

Power linking of multiple devices must be carried out only by instructed or skilled persons.

**WARNING**

Incorrect power linking may lead to overload of the electrical circuit and result in serious injuries and damage of property.

To prevent overload of the electrical circuit, when power linking multiple devices:

- Use cables with sufficient current-carrying capacity. The power cable supplied with the device is not suitable for power linking of multiple devices.
- Make sure that the total current draw of the device and all connected devices does not exceed the rated capacity of the power cables and the circuit breaker.
- Do not link more devices on one power link than the maximum recommended number.

Maximum recommended number of devices:

- at 100–120 V: 20 devices Dynamica Compact
- at 200–240 V: 40 devices Dynamica Compact

5. Setup

5.1. Warnings and Precautions



CAUTION
Laser radiation
Avoid direct eye exposure.



CAUTION
Restrict the access of unauthorized persons to the display area during setup, alignment and programming.

During alignment and setup the access of unauthorized persons to the area, where the laser radiation exceeds the spectator MPE, must be restricted. The temporary laser controlled area must be marked accordingly.

Follow all applicable national and site-specific regulations regarding laser safety.

5.2. Stand-alone Setup

When the Dynamica Compact is not connected to a controller or to other devices, it functions as a stand-alone device. It can be operated manually via the control panel and the manual controls or via an optional remote control.

For more information refer to Control Modes (see [6.2. Control Modes](#) on page 23).

5.3. DMX Connection

5.3.1. DMX-512 Protocol



Attention
Connect all data cables before supplying power.
Disconnect power supply before connecting or disconnecting data cables.

You need a DMX serial data link to run light shows of one or more devices using a DMX-512 controller.

The Dynamica Compact has 3-pin DMX signal IN and OUT connectors.

The pin assignment is as follows: pin 1 (ground), pin 2 (-), pin 3 (+).

Devices on a serial data link must be daisy-chained in a single line. The number of devices that you can control on one data link is limited by the combined number of the DMX channels of the connected devices and the 512 channels available in one DMX universe.

To comply with the TIA-485 standard, no more than 32 devices should be connected on one data link. In order to connect more than 32 devices on one data link, you must use a DMX optically isolated splitter/booster, otherwise this may result in deterioration of the DMX signal.

Note:

- Maximum recommended DMX data link distance: 300 m
- Maximum recommended number of devices on a DMX data link: 32 devices


5.3.2. DMX Cables

Shielded twisted-pair cables with 3-pin XLR connectors must be used for reliable DMX connection. You can purchase DMX cables directly from your Highlite International dealer or make your own cables.

If you use XLR audio cables for DMX data transmission, this may lead to signal degradation and unreliable operation of the DMX network.

When you make your own DMX cables, make sure that you connect the pins and wires correctly as shown in the figure below.

Figure 9

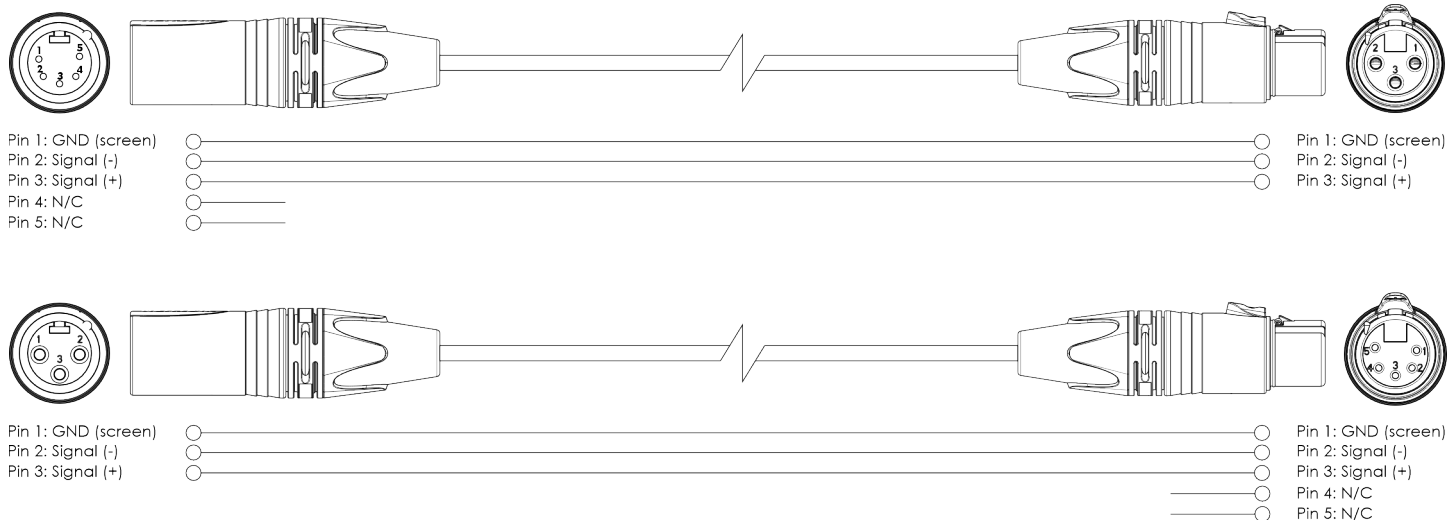


5.3.3. Master/Slave Setup

The Dynamica Compact supports master/slave control mode. To connect multiple devices in a master/slave setup, follow the steps below:

- 01) Connect the DMX OUT connector of the 1st device to the DMX IN connector of the 2nd device with a 3-pin DMX cable.
- 02) Repeat step 1 to connect all devices in a daisy-chain.
- 03) Connect a DMX terminator (120 Ω resistor) to the DMX OUT connector of the last device on the data link.
- 04) Set the 1st device on the data link as a master device (see [6.6.4. Slave Mode](#) on page 26).
- 05) Set the remaining devices as slave devices (see [6.6.4. Slave Mode](#) on page 26).

Figure 10

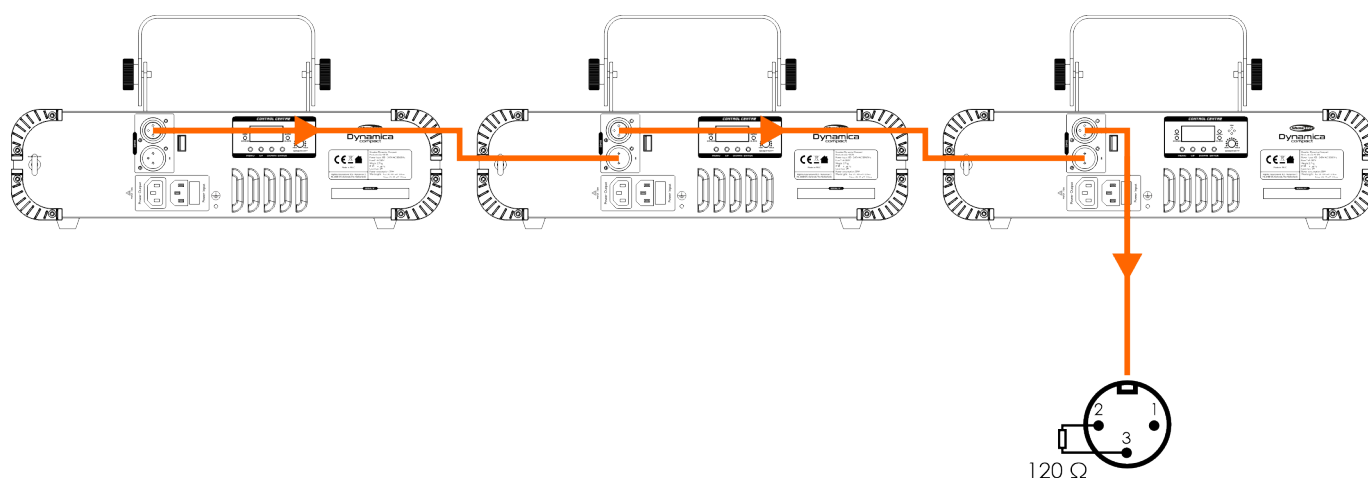


5.3.4. DMX Linking

To connect multiple devices on one DMX data link, follow the steps below:

- 01) Use a 3-pin DMX cable to connect the DMX OUT connector of the lighting controller to the DMX IN connector of the 1st device.
- 02) Connect the DMX OUT connector of the 1st device to the DMX IN connector of the 2nd device with a 3-pin DMX cable.
- 03) Repeat step 2 to connect all devices in a daisy-chain.
- 04) Connect a DMX terminator (120 Ω resistor) to the DMX OUT connector of the last device on the data link.

Figure 11

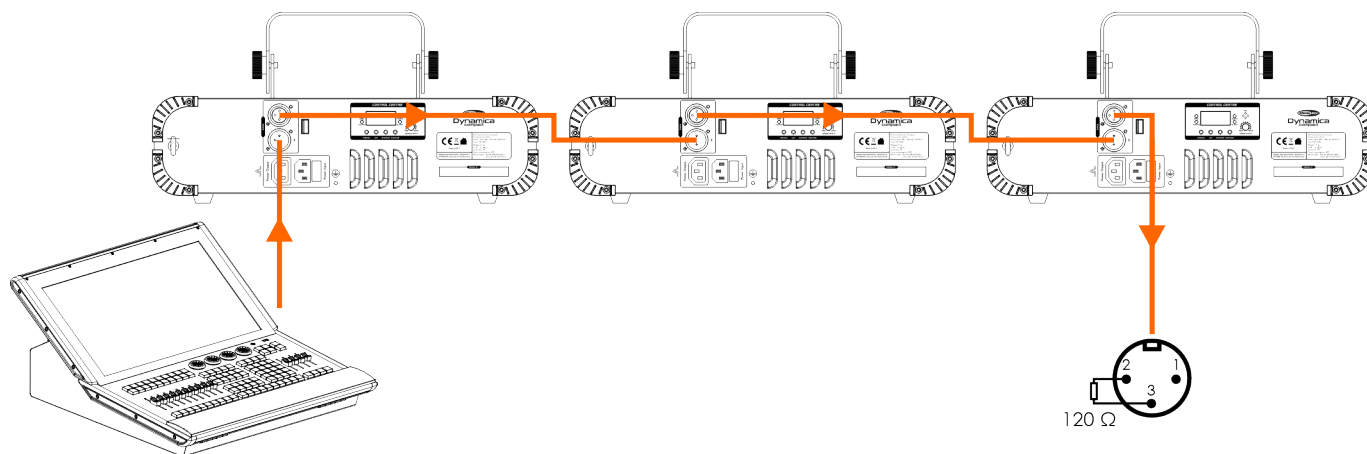

5.3.5. DMX Addressing

In a setup with multiple devices, make sure that you set the DMX starting address of each device correctly. The Dynamica Compact has 3 personalities: 2 Ch (2 channels), 5 Ch (5 channels) and 10 Ch (10 channels).

If you want to connect multiple devices on one data link and use them in 10-channel mode, for example, follow the steps below:

- 01) Set the starting address of the 1st device on the data link to 1 (001).
- 02) Set the starting address of the 2nd device on the data link to 11 (011), as $1 + 10 = 11$.
- 03) Set the starting address of the 3rd device on the data link to 21 (021), as $11 + 10 = 21$.
- 04) Continue assigning the starting addresses of the remaining devices by adding each time 10 to the previous number.

When addressing multiple devices on one data link, make sure that there are no overlapping channels. You cannot control devices individually if they have overlapping channels.

6. Operation

6.1. Safety Instructions for Operation



CAUTION
Laser radiation
Avoid direct eye exposure.

This device is a class 2M laser device according to the classification in NEN-EN-IEC 60825-1:2014. It emits visible radiation in the wavelength range 400–700 nm. Accidental exposure to the direct or reflected laser beam presents a low risk. Deliberate exposure to the direct or reflected laser beam can cause eye injury.

Check all applicable national and international regulations concerning laser safety before using this device. The user is responsible for the safety of all persons present during the use of the laser device.



Attention
This device must be used only for the purposes it is designed for.

This device is intended for professional use as a light effect with a laser projector. It can be installed only indoors. This device is not suitable for households and for general lighting.

Any other use, not mentioned under intended use, is regarded as non-intended and incorrect use.



Attention
Power supply

Before connecting the device to the power supply, make sure that the current, voltage and frequency match the input voltage, current and frequency specified on the information label on the device.

6.2. Control Modes

The Dynamica Compact can be controlled as a stand-alone device, in master/slave mode and with a DMX controller.

The Dynamica Compact supports the following control modes:

- Stand-alone: Auto mode, sound-controlled mode, IR remote control
- Master/slave: Auto mode, sound-controlled mode, IR remote control
- DMX-512: 2 channels, 5 channels and 10 channels

For more information about how to connect the devices, refer to Setup (see [5. Setup](#) on page 19).

To run the built-in programs in auto mode without a DMX controller:

- 01) Select one of the 14 built-in programs in Auto Mode (see [6.6.1. Auto Mode](#) on page 25).
- 02) Adjust the speed of the built-in program.

To run the built-in programs in sound-controlled mode without a DMX controller:

Select one of the 14 built-in programs in Sound Mode (see [6.6.2. Sound Mode](#) on page 25).


To run the built-in programs in auto operation mode or sound-controlled mode with the IR remote control (see [6.7. Remote Control](#) on page 27).

To operate the device with a DMX controller:

- 01) Select the DMX channel mode in the DMX Mode menu (see [6.6.3. DMX Mode](#) on page 26).
- 02) Set the DMX starting address of the device in the DMX Mode menu (see [6.6.3. DMX Mode](#) on page 26).
Refer to DMX Channels (see [6.8. DMX Channels](#) on page 30) for a complete overview of all DMX channels.

6.3. Control Panel

Figure 12

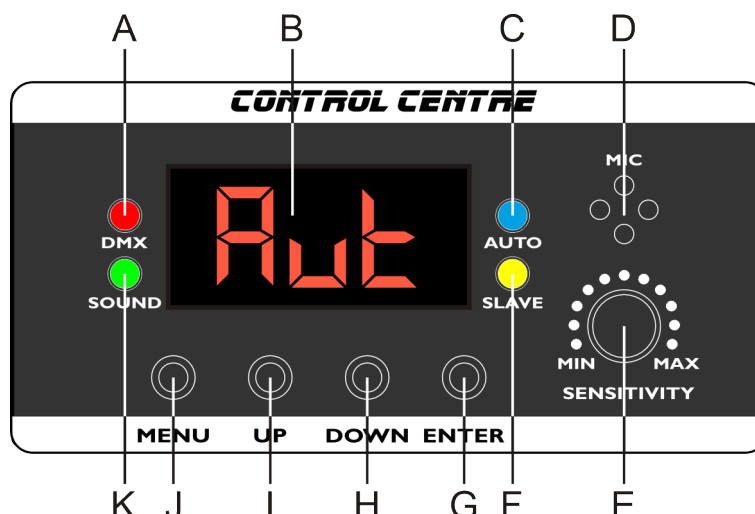

- A) DMX LED indicator (red)
- B) 7-segment LED display
- C) AUTO LED indicator (blue)
- D) Built-in microphone
- E) Audio sensitivity control
- F) SLAVE LED indicator (yellow)
- G) ENTER button
- H) DOWN button
- I) UP button
- J) MENU button
- K) SOUND LED indicator (green)

- Use the **MENU** button to exit the current submenu, to return to the Main Menu and to return to the start screen.
- Use the **UP/DOWN** buttons to navigate through the menus or to increase/decrease numeric values.
- Use the **ENTER** button to open the desired menu, to confirm your choice or to set the currently selected value.

6.4. Start-up

Upon start-up, the display shows a splash screen with the software version of the device.



Immediately afterwards, the display shows the start screen. The start screen provides information about the current control mode of the device. For example:



Press the **MENU** button to enter the main menu.

6.5. Menu Overview

Level 1	Level 2	Level 3
Aut (see 6.6.1. Auto Mode on page 25)	Au01–Au14	S 1–S100
Sou (see 6.6.2. Sound Mode on page 25)	So01–So14	
DMX (see 6.6.3. DMX Mode on page 26)	02Ch	d001–d511
	05Ch	d001–d508
	10Ch	d001–d503
SLA (see 6.6.4. Slave Mode on page 26)	SLAV	
SYS (see 6.6.5. Settings on page 26)	LEdS	on–oFF
	LEdr	on–oFF
	rESt	no–Yes

6.6. Main Menu Options

The main menu has the following options:

	Auto mode
	Sound mode
	DMX mode
	Slave mode
	Settings

01) Press the **MENU** button to navigate through the main menu.

02) Press the **ENTER** button to open the submenu.

6.6.1. Auto Mode

In this menu you can activate the auto programs and adjust the speed.

01) Press the **UP/DOWN** buttons to scroll through the 14 available options.

02) Press the **ENTER** button to confirm the selection and to open the submenu where you can adjust the speed.

03) Press the **UP/DOWN** buttons to adjust the speed of the selected auto programs. The adjustment range is S1–S100, from slow to fast.

6.6.2. Sound Mode

In this menu you can activate sound-controlled mode and select the sound-controlled programs.



Press the **UP/DOWN** buttons to scroll through the 14 available options.

Note:

You can adjust the music-sensitivity of the **built-in microphone (D)** with the **audio sensitivity control (E)**.

6.6.3. DMX Mode

In this menu you can set the channel mode of the device.

01) Press the **UP/DOWN** buttons to select one of the 3 options:

- 02 Ch
- 05 Ch
- 10 Ch

02) Press the **ENTER** button to confirm the selection and to open the submenu where you can set the DMX starting address of the device.

03) Press the **UP/DOWN** buttons to select the DMX starting address of the device. The selection range depends on the active DMX channel mode. For more information about the channel mode, refer to DMX Mode (see [6.6.3. DMX Mode](#)).

- d001–d511 (2 channels)
- d001–d508 (5 channels)
- d001–d503 (10 channels)

04) Press the **ENTER** button to confirm the selection. For more information about DMX channels, refer to DMX Channels (see [6.8. DMX Channels](#) on page 30).

6.6.4. Slave Mode

In this menu you can set the device as a slave device in a master/slave setup.

Note:

In a master/slave setup, make sure that only one device is set to master device and the remaining devices are set to slave devices. All slave devices will follow the master movement.

6.6.5. Settings

In this menu you can adjust the settings of the device. This menu has the following 3 options:

Display Backlight (see [6.6.5.1. Display Backlight](#))

Display Invert (see [6.6.5.2. Display Invert](#))

Reset (see [6.6.5.3. Reset](#))

01) Press the **UP/DOWN** buttons to navigate through the menu.

02) Press the **ENTER** button to open the submenu.

6.6.5.1. Display Backlight

In this submenu you can adjust the behavior of the display.

01) Press the **UP/DOWN** buttons to select one of the 2 options:

- On: The display does not return to the start screen and the backlight remains on
- Off: The display turns off after 30 s of inactivity

02) Press the **ENTER** button to confirm the selection.

6.6.5.2. Display Invert

In this submenu you can set the orientation of the display.

01) Press the **UP/DOWN** buttons to select one of the 2 options:

- On: The display is rotated by 180°
- Off: Regular view

02) Press the **ENTER** button to confirm the selection.

6.6.5.3. Reset

In this submenu you can reset the settings of the device to the default factory settings.

01) Press the **UP/DOWN** buttons to select one of the 2 options:

- No: Cancel the reset and return to the previous screen
- Yes: Reset to factory default settings

02) Press the **ENTER** button to confirm the selection.

6.7. Remote Control

The device can be operated with an IR remote control. The remote control is included in the delivery.



DANGER
Do not ingest battery, chemical burn hazard.

The remote control contains a coin cell battery. If the coin cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

The battery is already installed in the remote control. It is protected against discharge by a transparent plastic foil.

- Remove the plastic foil before using the remote control for the first time.
- When replacing the battery, make sure that the polarity is correct. Incorrect polarity may damage the remote control.

6.7.1. Remote Control Mode

Point the IR remote control to the **IR sensor (06)** to control the device remotely. Make sure that the you point the remote control in the range of the infrared sensor.

Note:

You can control several devices at the same time with the IR remote control.


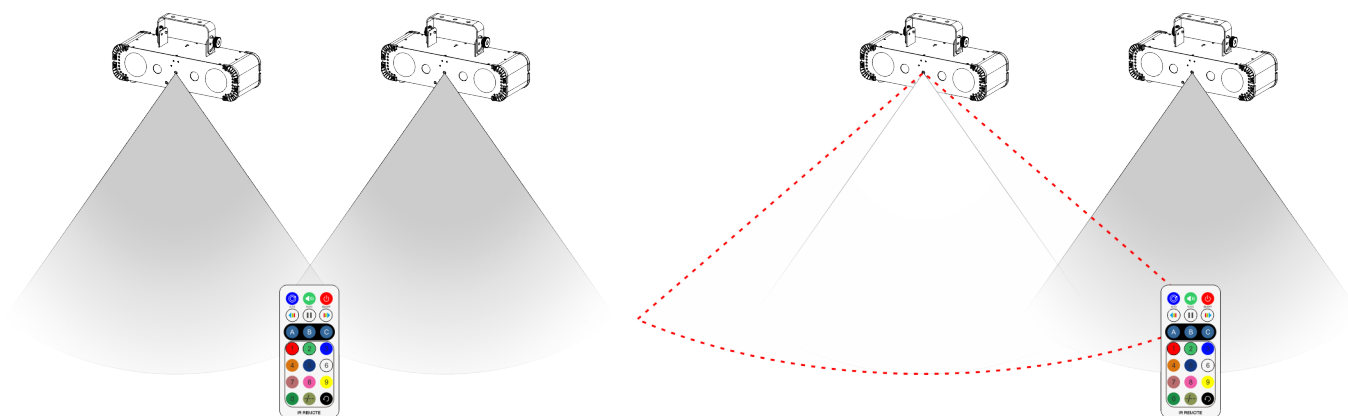


Figure 13

6.7.2. Functions of the Remote Control Buttons

The buttons of the remote control have the following functions:

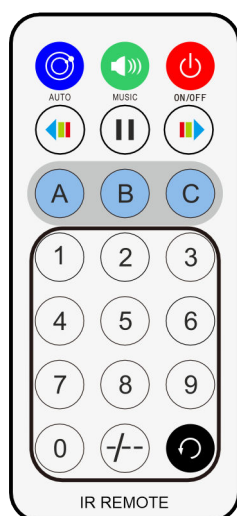

Button	Function	Description
	On/Off	Press the ON/OFF button for 2 seconds to activate the different modes except the Slave mode
	Auto	Press the button to activate Auto program 1–14
	Music	Press the button to activate Music program 1–14. If the device receives a sound signal, the Music LED indicator on the backside will blink (Green LED).
	Pause	Press the button to pause the built-in programs or color change
	Speed	Press the buttons to choose the desired speed for the auto program
	LED auto mode	No function
	Strobe auto mode	No function
	Strobe ON/OFF	No function
-	Speed 0–9	Press one of the buttons to adjust the built-in program speed. 0 = slowest, 9 = fastest
	-/- -	No function
	Repeat	No function

6.7.3. Remote Control Operation

When you control the device with the IR remote control, the following operation modes are possible:

- IR Auto mode (see [6.7.3.1. IR Auto Mode](#))
- IR Sound-controlled mode (see [6.7.3.2. IR Sound-controlled Mode](#))

6.7.3.1. IR Auto Mode


- 01) Press the **AUTO** button to activate the IR auto mode.
- 02) Press the **AUTO** button multiple times to select one of the built-in programs. There are 14 built-in programs available.
- 03) Press the left or right **SPEED** buttons to increase or decrease the speed of the selected auto program.

6.7.3.2. IR Sound-controlled Mode

- 01) Press the **MUSIC** button to activate the IR sound-controlled mode.
- 02) Press the **MUSIC** button multiple times to select one of the sound-controlled programs. There are 14 sound-controlled programs available.

You can adjust the music-sensitivity of the **built-in microphone (D)** with the **audio sensitivity control (E)**.

6.8. DMX Channels

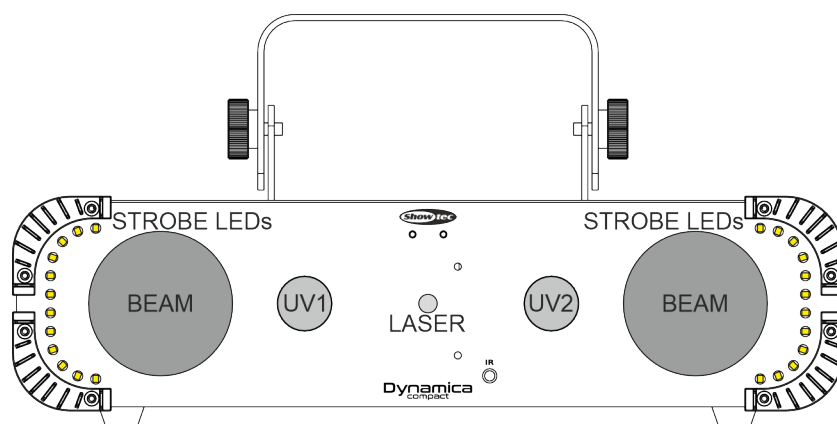

2 CH	5 CH	10 CH	Function	Value	Setting
1			Mix Show (beams, UV1+2, laser, strobe LEDs)	000-005	No function
				006-022	Program 1
				023-040	Program 2
				041-058	Program 3
				059-076	Program 4
				077-094	Program 5
				095-112	Program 6
				113-129	Program 7
				130-147	Program 8
				148-165	Program 9
				166-183	Program 10
				184-201	Program 11
				202-219	Program 12
				220-237	Program 13
				238-255	Program 14
2			Program Speed	000-250	Speed for the CH1 programs, from slow to fast
				251-255	Sound-controlled
	1		UV1+UV2	000-005	No function
				006-055	Program 1
				056-105	Program 2
				106-155	Program 3
				156-205	Program 4
				206-255	Program 5
	2		Beams	000-005	No function
				006-013	Program 1
				014-021	Program 2
				022-029	Program 3
				030-037	Program 4
				038-045	Program 5
				046-053	Program 6
				054-061	Program 7
				062-069	Program 8
				070-077	Program 9
				078-085	Program 10
				086-093	Program 11
				094-101	Program 12
				102-109	Program 13

2 CH	5 CH	10 CH	Function	Value	Setting
				110–117	Program 14
				118–125	Program 15
				126–133	Program 16
				134–141	Program 17
				142–149	Program 18
				150–157	Program 19
				158–165	Program 20
				166–173	Program 21
				174–181	Program 22
				182–189	Program 23
				190–197	Program 24
				198–205	Program 25
				206–213	Program 26
				214–221	Program 27
				222–229	Program 28
				230–237	Program 29
				238–245	Program 30
				246–255	Program 31
	3		Laser	000–005	No function
				006–040	Program 1
				041–076	Program 2
				077–112	Program 3
				113–147	Program 4
				148–183	Program 5
				184–219	Program 6
				220–255	Program 7
	4		Strobe LEDs	000–005	No function
				006–027	Program 1
				028–050	Program 2
				051–073	Program 3
				074–095	Program 4
				096–118	Program 5
	5		Program Speed	000–250	Speed for the CH4 programs, from slow to fast
				251–255	Sound-controlled
		1	Dimmer UV1	000–255	From low to high intensity (0–100 %)
		2	Dimmer UV2	000–255	From low to high intensity (0–100 %)
		3	Strobe UV1+UV2	000–250	Strobe, from slow to fast
				251–255	Strobe, sound-controlled
		4	Beams	000–005	No function
				006–013	Program 1
				014–021	Program 2
				022–029	Program 3
				030–037	Program 4
				038–045	Program 5
				046–053	Program 6
				054–061	Program 7
				062–069	Program 8
				070–077	Program 9
				078–085	Program 10
				086–093	Program 11
				094–101	Program 12

2 CH	5 CH	10 CH	Function	Value	Setting
				102–109	Program 13
				110–117	Program 14
				118–125	Program 15
				126–133	Program 16
				134–141	Program 17
				142–149	Program 18
				150–157	Program 19
				158–165	Program 20
				166–173	Program 21
				174–181	Program 22
				182–189	Program 23
				190–197	Program 24
				198–205	Program 25
				206–213	Program 26
				214–221	Program 27
				222–229	Program 28
				230–237	Program 29
				238–245	Program 30
				246–255	Program 31
		5	Speed	000–250	Speed for the CH4 programs, from slow to fast
				251–255	Sound-controlled
		6	Laser	000–005	No function
				006–048	Red
				049–089	Green
				090–131	Red + green
				132–173	Red strobe + green
				174–215	Red + green strobe
				216–255	Red strobe + green strobe alternating
		7	Laser Strobe	000–005	No function
				006–250	Speed for the CH6 programs, from slow to fast
				251–255	Strobe sound-controlled
		8	Laser Rotation	000–000	Stop
				001–127	Clockwise rotation, from slow to fast
				128–128	Stop
				129–255	Counterclockwise rotation, from slow to fast
		9	Strobe LEDs	000–005	No function
				006–027	Program 1
				028–050	Program 2
				051–073	Program 3
				074–095	Program 4
				096–118	Program 5
				119–141	Program 6
				142–163	Program 7
				164–186	Program 8
				187–209	Program 9
				210–232	Program 10
				233–255	Program 11
		10	Program Speed	000–250	Speed for the CH9 programs, from slow to fast
				251–255	Sound-controlled

7. Troubleshooting

This troubleshooting guide contains solutions to problems which can be carried out by an ordinary person. The device does not contain user-serviceable parts.

Unauthorized modifications to the device will render the warranty void. Such modifications may result in injuries and material damage.

Refer servicing to instructed or skilled persons. Contact your Highlite International dealer in case the solution is not described in the table.

Problem	Probable cause(s)	Solution
The device does not function at all	No power to the device	Make sure that the device is connected to power supply and the cables are plugged in
	Main fuse is blown	Replace the fuse (see 8.3.1. Replacing the Fuse on page 35)
The device responds erratically	The factory settings of the device are changed	Reset the parameters of the device to the default factory settings (see 6.6.5.3. Reset on page 27)
The device does not respond to DMX control	The controller is not connected	Connect the controller
	The signal is reversed. The 3-pin DMX OUT of the controller does not match the DMX IN of the device	Install a phase-reversing cable between the controller and the device
	The controller is defective	Try using another controller
The device responds erratically to DMX control	Connections are defective	Examine connections and cables. Correct defective connections. Repair or replace damaged cables
	The data link is not terminated with a 120 Ω termination plug	Insert a termination plug in the DMX OUT connector of the last device on the link
	Incorrect addressing	Make sure that the address settings are correct
	In case of a setup with multiple devices, one of the devices is defective and disturbs data transmission on the link	To find out the defective device, bypass one device at a time until normal operation is restored
No light or LEDs cut out intermittently	Laser or LEDs are damaged	Disconnect the device and contact your Highlite International dealer
	The input power parameters of the device do not match the local AC voltage and frequency	Disconnect the device. Make sure that the local current, voltage and frequency match the input voltage, current and frequency specified on the information label on the device
The device does not function with the IR remote control	The device does not accept the IR remote	Check if the IR remote is set to ON in the settings menu
	The battery of the IR remote is depleted	Replace the battery of the IR remote

8. Maintenance

8.1. Safety Instructions for Maintenance



CAUTION
Laser radiation
Avoid direct eye exposure.



DANGER
Electric shock caused by dangerous voltage inside

Disconnect power supply before servicing or cleaning.

8.2. Preventive Maintenance



Attention
Before each use, examine the device visually for any defects.

Make sure that:

- All screws used for installing the device or parts of the device are tightly fastened and are not corroded.
- The safety devices are not damaged.
- There are no deformations on housings, fixings and installation points.
- The lens is not cracked or damaged.
- The power cables are not damaged and do not show any material fatigue.

8.2.1. Basic Cleaning Instructions



CAUTION
Laser radiation
Avoid direct eye exposure.

To avoid laser emission, remove the key before cleaning the device.

The external lens of the device must be cleaned periodically in order to optimize the light output. The cleaning schedule depends on the conditions at the site where the device is installed. When smoke or fog machines are used at the site, the device will need more frequent cleaning. On the other hand, if the device is installed in well-ventilated area, it will need less frequent cleaning. To establish a cleaning schedule, examine the device at regular intervals during the first 100 hours of operation.

To clean the device, follow the steps below:

- 01) Disconnect the device from the electrical power supply.
- 02) Allow the device to cool down for at least 15 minutes.
- 03) Remove the dust collected on the external surface with dry compressed air and a soft brush.
- 04) Clean the lens with a damp cloth. Use a mild detergent solution.
- 05) Dry the lens carefully with a lint-free cloth.
- 06) Clean the DMX and other connections with a damp cloth.



Attention

- Do not immerse the device in liquid.

- Do not use alcohol or solvents.

Make sure that the connections are fully dry before connecting the device to the power supply and to other devices.

8.3. Corrective Maintenance

The device does not contain user-serviceable parts. Do not open the device and do not modify the device.

Refer repairs and servicing to instructed or skilled persons. Contact your Highlite International dealer for more information.

8.3.1. Replacing the Fuse



DANGER
Electric shock caused by short-circuit

- Do not bypass the thermostatic switch or fuses.
- Replace fuses only with the same type and rating.

Power surges, short-circuit or incorrect electrical power supply may cause a fuse to burn out. If the fuse burns out, the device will not function anymore. If this happens, follow the steps below:

- 01) Disconnect the device from the electrical power supply.
- 02) Allow the device to cool down for at least 15 minutes.
- 03) Pry up the fuse holder, integrated in the power connector, with a flat-blade screwdriver.
- 04) If the fuse is brown or unclear, it is burned out. Remove the old fuse.
- 05) Insert a new fuse in the fuse holder. Make sure that the type and the rating of the replacement fuse are the same as the ones specified on the information label of the product.
- 06) Replace the fuse holder in the opening and push it gently back in place.

9. Deinstallation, Transportation and Storage

9.1. Instructions for Deinstallation

**WARNING**

Incorrect deinstallation can cause serious injuries and damage of property.

- Let the device cool down before dismounting.
- Disconnect power supply before deinstallation.
- Always observe the national and site-specific regulations during deinstallation and derigging of the device.
- Wear personal protective equipment in compliance with the national and site-specific regulations.

9.2. Instructions for Transportation

- Use the original packaging to transport the device, if possible.
- Always observe the handling instructions printed on the outer carton box, for example: "Handle with care", "This side up", "Fragile".

9.3. Storage

- Clean the device before storing (see [8.2.1. Basic Cleaning Instructions](#) on page 34).
- Store the device in the original packaging, if possible.

10. Disposal

Correct disposal of this product



Waste Electrical and Electronic Equipment

This symbol on the product, its packaging or documents indicates that the product shall not be treated as household waste. Dispose of this product by handing it to the respective collection point for recycling of electrical and electronic equipment. This is to avoid environmental damage or personal injury due to uncontrolled waste disposal. For more detailed information about recycling of this product contact the local authorities or the authorized dealer.

11. Approval



Check the respective product page on the website of Highlite International (www.highlite.com) for an available declaration of conformity.

This product is in compliance with NEN-EN-IEC 60825-1:2014.

